


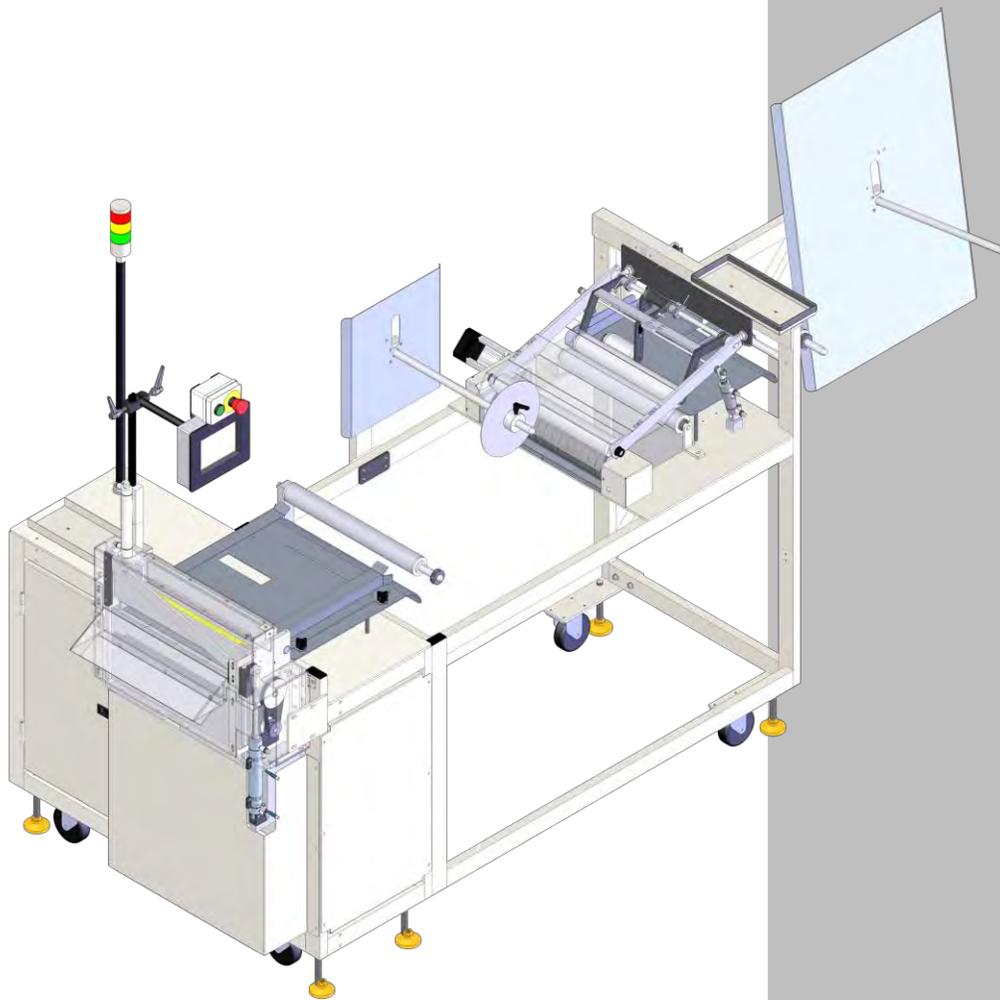

Model **3200PB1Z**

Revision 1 Updated Nov 24, 2015

Technical Manual & Parts Lists



Atlanta Attachment Company

362 Industrial Park Drive

Lawrenceville, GA 30046

770-963-7369 • www.atlatt.com

ATLANTA ATTACHMENT COMPANY, INC.

Confidential and Proprietary Information

The materials contained herein are confidential and proprietary information of Atlanta Attachment Company. In addition to any confidentiality and non-disclosure obligations that currently exist between you and Atlanta Attachment Company, your use of these materials serves as an acknowledgment of the confidential and proprietary nature of these materials and your duty not to make any unauthorized use or disclosure of these materials.

All materials contained herein are additionally protected by United States Copyright law and may not be used, disclosed, reproduced, distributed, published or sold without the express written consent of Atlanta Attachment Company, which consent may be withheld in Atlanta Attachment Company's sole discretion. You may not alter or remove any copyright, trademark or other notice from copies of these materials.

Patents & Patents Pending

The sale of this product does not sell or otherwise transfer any license or other rights under any U.S. Patent or other corresponding foreign patent.

This equipment is manufactured under one or more of the following patents:

4,280,421 • 4,432,294 • 4,466,367 • 4,644,883 • 5,134,947 • 5,159,889 • 5,203,270 • 5,373,798 • 5,437,238 • 5,522,332 • 5,524,563 • 5,562,060 • 5,634,418 • 5,647,293 • 5,657,711 • 5,743,202 • 5,865,135 • 5,899,159 • 5,915,319 • 5,918,560 • 5,924,376 • 5,979,345 • 6,035,794 • 6,055,921 • 6,202,579 • 6,279,869 • 6,295,481 • 6,494,225 • 6,523,488 • 6,574,815 • 6,802,271 • 6,834,603 • 6,968,794 • 6,994,043 • 7,543,364 • 7,574,788 • 7,647,876 • 7,735,439

Foreign Patents: 9-520,472 • 0,537,323 • 92,905,522.6 • 96,936,922.2 • 2,076,379 • 2,084,055
Other U.S. and Foreign Patents Pending.

IMPORTANT

It is important to read and understand the information contained within this manual before attempting to operate the machine. Atlanta Attachment Co., Inc. shall not be held liable for damage resulting from misuse of the information presented within, and reserves the right to change the information contained within, without prior notification.

Contents

Important Safety Instruction	1
Liability	2
Safety Equipment on the Machines	3
Protective Eyewear	4
Important Notices.....	5
Maintenance	7
Repair	8
A Word to the End User.....	9
Safety Precautions.....	9
Electrical / Pneumatic Setup	10
Machine Setup	10
Component Identification	11
Touch Screen Operation	12
Light Tower Function	12
Machine Operation.....	13
Setting Up to Make Borders	15
Setup Screen.....	15
Settings:.....	15
Machine Adjustments	16
3200PB1Z-Prefeed Motor Parameter Settings.....	17
3200PB1Z Main Feed Motor Parameter Settings.....	18
Machine Maintenance	19
Electric Eye Sensor Adjustment	19
Reflective Tape Maintenance	19
Assembly Drawings & Parts Lists	20
33200PB1Z Measure & Cut Border Workststion.....	22
3200085 Small Roll sewing Rod Assembly	24
3200332 Console 3200PB1Z	26
1278-6010 Start / Stop Button Assembly	27
3200333 Dual Top Marker Pen.....	29
32004000PB1 Guillotine Assembly	31
3200500 Prefeed Roller Assembly	33
3200501 Prefeed Roller Assembly	34
EE49111AS Push Button Switch Assembly.....	35
33005650A Bottom Puller Roller Assembly	37
32007700P Roll Holder Assembly	39

32009000PB1 Control System.....	41
33001130 Light Assembly.....	42
4060-0652 P C Board.....	43
3200PB1Z-WD Wiring Diagram, Control Panel.....	44
1330E-WD1 Wiring Diagram.....	45
3200PB1Z-PD Pneumatic Diagram.....	46

Important Safety Instruction



This part of the Instruction Material is provided for the safe use of your equipment. It contains important information to help work safely with the unit and describes the dangers inherent in machinery. Some of these dangers are obvious, while others are less evident.

Mandatory Information

All persons operating and/or working on the 3200PB1Z Mattress Border Workstation should read and understand all parts of the Safety Instructions. This applies, in particular, for persons who only operate and/or work on the unit occasionally (e.g. for maintenance and repair). Persons who have difficulty reading must receive particularly thorough instruction.

Scope of the Instruction Material

- The Instruction Material comprises:
- Safety information
- Operator Instructions
- Electrical and Pneumatic diagrams

And may also include;

- A list of recommended spare parts
- Instruction Manual(s) for components made by other manufacturers
- The layout and installation diagram containing information for installation

Intended Use

Our machines are designed and built in line with the state of the art and the accepted safety rules. However, all machines may endanger the life and limb of their users and/or third parties and be damaged or cause damage to other property, particularly if they are operated incorrectly or used for purposes other than those specified in the Instruction Manual.

Exclusion of Misuse



Non-conforming uses include, for example, using the equipment for something other than it was designed for, as well as operation without duly installed safety equipment. The risk rests exclusively with the end user.

Conforming use of the machine includes compliance with the technical data, information and regulations in all parts of the complete Instruction Material, as well as compliance with the maintenance regulations. All local safety and accident prevention regulations must also be observed.

Liability

The machine should only be operated when in perfect working order, with due regard for safety and the potential dangers, as well as in accordance with the Instruction Material. Faults and malfunctions capable of impairing safety should be remedied immediately. We cannot accept any liability for personal injury or property damage due to operator errors or non-compliance with the safety instructions contained in this booklet. The risk rests exclusively with the end user.

The Instruction Material should always be kept near the machine so that it is accessible to all concerned.

The local, general, statutory and other binding regulations on accident prevention and environmental protection must also be observed in addition to the Instruction Material. The operating staff must be instructed accordingly. This obligation also includes the handling of dangerous substances and provision/use of personal protective equipment.

The Instruction Material should be supplemented by instructions, including supervisory and notification duties with due regard for special operational features, such as the organization of work, work sequences, the personnel deployed, etc.

The personnel's awareness of the dangers and compliance with the safety regulations should be checked at irregular intervals.

Choice and Qualification of Personnel

Ensure that work on the machine is only carried out by reliable persons who have been appropriately trained for such work - either within the company, by our field staff or at our office - and who have not only been duly appointed and authorized, but are also fully familiar with the local regulations. Work on the machine should only be carried out by skilled personnel, under the management and supervision of a duly qualified engineer.

This not only applies when the machine is used for production, but also for special work associated with its operation (start-up and maintenance), especially when it concerns work on the hydraulic or electrical systems, as well as on the software/serial bus system.

Training

Everyone working on or with the machine should be duly trained and informed with regard to correct use of the safety equipment, the foreseeable dangers which may arise during operation of the machine and the safety precautions to be taken. In addition, the personnel should be instructed to check all safety mechanisms at regular intervals.

Responsibilities

Clearly define exactly who is responsible for operating, setting-up, servicing and repairing the machine. Define the responsibilities of the machine operator and authorize him to refuse any instructions by third parties if they run contrary to the machine's safety. This applies in particular for the operators of machines linked to other equipment. Persons receiving training of any kind may only work on or with the machine under the constant supervision of an experienced operator. Note the minimum age limits permitted by law.

A Word to the Operator

The greatest danger inherent in our machines: is that of fingers, hands or loose clothing being drawn into a machine by live, coasting or rotating tools or assemblies or of being cut by sharp tools or burned by hot elements.

ALWAYS BE CONSCIOUS OF THESE DANGERS!

Safety Equipment on the Machines



All machines are delivered with safety equipment, which shall not be removed or bypassed during operation.

The correct functioning of safety equipment on machines and systems should be checked every day and before every new shift starts, after maintenance and repair work, when starting up for the first time and when restarting (e.g. after prolonged shutdowns).

If safety equipment has to be dismantled for setting-up, maintenance or repair work, such safety equipment shall be replaced and checked immediately upon completing the maintenance or repair work. All protective mechanisms shall be fitted and fully operational whenever the machine is at a standstill or if it has been shut down for a longer period of time.

Damage

If any changes capable of impairing safety are observed in the machine or its mode of operation, such as malfunctions, faults or changes in the machine or tools, appropriate steps must be taken immediately, the machine switched off and a proper lockout tagout procedure followed. The machine should be examined for obvious damage and defects at least once per shift. Damage found shall be immediately remedied by a duly authorized person before resuming operation of machine.

The machine should only be operated when in perfect working order and when all protective mechanisms and safety equipment, such as detachable protective mechanisms, emergency STOP systems, etc. are in place and operational.

Faults or Errors

The machine must be switched off and all moving or rotating parts allowed to come to a standstill and secured against accidental restart before starting to remedy any faults or errors.


Signs on the Machine

Safety and danger signs on the machine should be observed and checked at regular intervals to ensure that they are complete and undamaged. They should be clearly visible and legible at all times.

Clothing, Jewelry, Protective Equipment

Long loose hair, loose-fitting clothes, gloves and jewelry, including rings, should be avoided in order to avoid injuries due to being caught, drawn in and wound up inside the machine.

Protective Eyewear

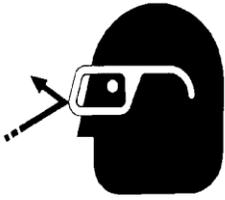

Protective eyewear that has been tested by the local authorities should be worn whenever there is a possibility of loose or flying objects or particles such as when cleaning the machine with compressed air.

Tools

Always count the number of tools in your possession before starting work on the machine. This will allow you to check that no tools have been left behind inside the machine. Never leave a tool in the machine while working.

Oils, Lubricants, Chemicals

Note the applicable safety regulations for the product used.

No Smoking, Fire, Explosion Hazard

Smoking and open flame (e.g. welding work) should be prohibited in the production area due to the risk of fire and explosions.

Workplace

A clear working area without any obstructions whatsoever is essential for safe operation of the machine. The floor should be level and clean, without any waste.

The workplace should be well lit, either by the general lighting or by local lights.

Emergency STOP

The emergency STOP buttons bring all machine movements to a standstill. Make sure you know exactly where they are located and how they work. Try them out. Always ensure easy access to the nearest emergency STOP button while working on the machine.

First Aid

1. Keep calm even when injured.
2. Clear the operator from the danger zone. The decision of what to do and whether to seek additional assistance rests entirely with you, particularly if someone has been trapped.
3. Give First Aid. Special courses are offered by such organizations as the employers' liability insurance association. Your colleagues should be able to rely on you and vice versa.
4. Call an ambulance. Do you know the telephone numbers for the ambulance service, police and fire service?

Important Notices

Reporting and Fighting Fires

Read the instructions posted in the factory with regard to reporting fires and the emergency exits. Make sure you know exactly where the fire extinguishers and sprinkler systems are located and how they are operated. Pass on the corresponding information to the firemen when they arrive. Ensure there are enough signs to avoid fire hazards.

The following fire extinguishers may be used:

- Dry powder extinguishers, ABC fire-extinguishing powder.
- Carbon dioxide fire extinguishers to DIN 14461 for electronic components. Great care must be exercised when using carbon dioxide fire extinguishers in confined, badly ventilated rooms (see DIN 14406 and 14270).

Isolate the machine from the power supply if a fire breaks out. Do not use water on burning electrical parts until it is absolutely certain that they have been completely disconnected from the power supply. Burning oils, lubricants, plastics and coatings on the machine can give off gases and vapors that may be harmful to your health.

A qualified person should be consulted to repair the damage after a fire.

Electrical Power Supply



Before undertaking any maintenance or repair work on the machine, switch off the electrical power to the machine at the main source and secure it with a padlock so that it cannot be switched on again without authorization.

In practice, this may mean that the technician, electrician and operator all attach their own padlock to the master switch simultaneously so that they can carry out their work safely. Locking extension plates should be available for multiple locks if required. The primary purpose for a lockout/tagout procedure is to protect workers from injury caused by unexpected energizing or start-up of equipment.

Energy sources (electrical/pneumatic/hydraulic, etc.) for the equipment shall be turned off or disconnected and the switches locked or labeled with a warning tag. It is the responsibility of the employer to establish control procedures. Follow lockout/tagout procedures before, setup and/or any service or maintenance work is performed, including lubrication, cleaning or clearance of jams.

Caution: The machine is still not completely de-energized even when the master switch is off.

- Electricity - The machine is always isolated from the electrical power supply whenever the master switch has been switched off. However, this does not apply for the power supply in the control cabinet, nor for equipment that does not draw its power via the master switch.
- Pneumatic / hydraulic energy - Almost all our machines carry compressed air. In addition to switching off the master switch, the air supply must also be disconnected and the machine checked to ensure it is depressurized before starting any work on the machine; otherwise the machine may execute uncontrolled movements.

- Kinetic energy - Note that some motors or spindles, for example, may continue to run or coast run on after being switched off.
- Potential energy - Individual assemblies may need to be secured if necessary for repair work.

Delivery of the Machine/Packaging

Note any markings on the packaging, such as weights, lifting points and special information. Avoid temperature fluctuations. Condensation may damage the machine.

Transport Damage

The packaging and machine must immediately be examined for signs of damage in transit. Such damage must be reported to the shipper/transporter within the applicable time limits. Contact Atlanta Attachment Company and/or your transport insurer immediately, if signs of damage are visible. Never operate a damaged machine.

Interim Storage

If the machine has to be stored temporarily, it must be oiled or greased and stored in a dry place where it is protected from the weather in order to avoid damage. A corrosion-inhibiting coating should be applied if the machine has to be stored for a longer period of time and additional precautions taken to avoid corrosion.

Transporting the Machine

Disconnect the machine from all external connections and secure any loose assemblies or parts. Never step under a suspended load. When transporting the machine or assemblies in a crate, ensure that the ropes or arms of a forklift truck are positioned as close to the edge of the crate as possible. The center of gravity is not necessarily in the middle of the crate. Note the accident prevention regulations, safety instructions and local regulations governing transport of the machine and its assemblies.

Only use suitable transport vehicles, hoisting gear and load suspension devices that are in perfect working order and of adequate carrying capacity. Transport should only be entrusted to duly qualified personnel.

Never allow the straps to rest against the machine enclosure and never push or pull sensitive parts of the machine. Ensure that the load is always properly secured. Before or immediately after loading the machine, secure it properly and affix corresponding warnings.

All transport guards and lifting devices must be removed before the machine is started up again. Any parts that are to be removed for transport must be carefully refitted and secured before the machine is started up again.

Workplace Environment

Our machines are designed for use in enclosed rooms: Permissible ambient temperature approx. 5 - 40 °C (40 - 104 °F). Malfunctions of the control systems and uncontrolled machine movements may occur at temperatures outside this range.

Protect against climatic influences, such as electrostatic charges, lightning strikes, hail, storm damage, high humidity, salinity of the air in coastal regions.

Protect against influences from the surroundings: no structure-borne vibrations, no grinding dust, or chemical vapors.

Protect against unauthorized access.

Ensure that the machine and accessories are set up in a stable position.

Ensure easy access for operation and maintenance (Instruction Manual and layout diagram); also verify that the floor is strong enough to carry the weight of the machine.

Local Regulations

Particular attention must be paid to local and statutory regulations, etc. when installing machines and the plant (e.g. with regard to the specified escape routes). Note the safety zones in relation to adjacent machines.

Maintenance

General Safety Instructions

The machine shall be switched off, come to a standstill and be secured so that it cannot be switched on again inadvertently before starting any maintenance work whatsoever. Use proper lockout/tagout procedures to secure the machine against inadvertent startup.

Remove any oil, grease, dirt and waste from the machine, particularly from the connections and screws, when starting the maintenance and/or repair work. Do not use any corrosive-cleaning agents. Use lint-free rags.

Retighten all screw connections that have to be loosened for the maintenance and repair work. Any safety mechanisms that have to be dismantled for setting-up, maintenance or repair purposes must be refitted and checked immediately after completing the work.

Maintenance, Care, Adjustment

The activities and intervals specified in the Instruction Manual for carrying out adjustments, maintenance and inspections must be observed and parts replaced as specified.

All hydraulic and pneumatic lines should be examined for leaks, loose connections, rubbing and damage whenever the machine is serviced. Any defects found must be remedied immediately.

Waste, Disassembly, Disposal

Waste products should be cleared from the machine as soon as possible as not to create a fire hazard. Ensure that fuels and operating lubricants, as well as replacement parts are disposed of in a safe and ecologically acceptable manner. Note the local regulations on pollution control.

When scrapping (disassembling) the machine and its assemblies, ensure that these materials are disposed of safely. Either commission a specialist company familiar with the local regulations or note the local regulations when disposing of these materials yourself. Materials should be sorted properly.

Repair

Replacement Parts

We cannot accept any liability whatsoever for damage due to the use of parts made by other manufacturers or due to unqualified repair or modification of the machine.

Repair, Electrical

The power supply must be switched off (master switch off) and secured so that it cannot be switched on again inadvertently before starting any work on live parts.

Those parts of the machine and plant on which inspection, maintenance or repair work is to be carried out must be isolated from the power supply, if specified. The isolated parts must first be checked to determine that they are truly de-energized before being grounded and short-circuited. Adjacent live parts must also be isolated.

The protective measures implemented (e.g. grounding resistance) must be tested before restarting the machine after all assembly or repair work on electric parts.

Signal generators (limit switches) and other electrical parts on the safety mechanisms must not be removed or bypassed. Only use original fuses or circuit overloads with the specified current rating. The machine must be switched off immediately if a fault develops in the electrical power supply.

The electrical equipment of our machines must be checked at regular intervals and any defects found must be remedied immediately.

If it is necessary to carry out work on live parts, a second person should be on hand to operate the emergency OFF switch or master switch with voltage release in the event of an emergency. The working area should be cordoned off and marked by a warning sign. Only use electrically insulated tools.

Ventilation/Hazardous Gases

It is the end users responsibility to ensure adequate ventilation is provided to exhaust any and all noxious or hazardous gases that may be present in the working environment.

Hydraulic and Pneumatic Systems

Work on hydraulic or pneumatic equipment shall only be carried out by persons with training, knowledge and experience of hydraulic systems. Pressure lines shall be depressurized before starting any repair work.

General Liability

Liability for machine damage and personal injury is extinguished completely if any unauthorized conversions or modifications are undertaken. The machine must not be modified, enlarged or converted in any way capable of affecting safety without the manufacturer's prior approval.

Starting Machine Movements

Read the Instruction Manual carefully to establish which keys and functions start machine movements.

A Word to the End User

The end user has sole responsibility to enforce the use of safety procedures and guards on the machine. Any other safety devices or procedures due to local regulations should be should be retrofitted in accordance to these regulations and/or the EC Directive on the safety of machines.

Operator's position must always be readily accessible. Escape routes must always be kept clear and safety areas should be identified.

Safety Precautions

Safety should be a constant concern for everyone. Always be careful when working with this equipment. While normal safety precautions were taken in the design and manufacture of this equipment, there are some potential safety hazards.

Everyone involved with the operation and maintenance of this equipment should read and follow the instructions in this manual.

Operate the equipment only as stated in this manual. Incorrect use could cause damage to the equipment or personal injury.

It is the owner's responsibility to make certain that the operator reads and understands this manual before operating this equipment. It is also the owner's responsibility to make certain that the operator is a qualified and physically able individual, properly trained in the operation of this equipment.

Specific safety warning decals are located on the equipment near the immediate areas of potential hazards. These decals should not be removed or obliterated. Replace them if they become non-readable.

- ALWAYS keep safety shields and covers in place, except for servicing.
- ALWAYS operate equipment in daylight or with adequate working lights.
- Follow daily and weekly checklists, making sure hoses are tightly secured and bolts are tightened.
- ALWAYS watch and avoid holes or deep depressions.
- ALWAYS wear adequate eye protection when servicing the hydraulic system and battery.
- NEVER operate a poorly maintained machine.
- NEVER allow persons to operate this machine without proper instruction.
- NEVER put hands or feet under any part of the machine while it is running.
- NEVER attempt to make any adjustments or repairs to the machine while running. Repairs or maintenance should be performed by trained personnel only.
- NEVER work under the machine unless it is safely supported with stands, blocks or a hoist and blocks.
- NEVER touch hot parts of machine.

General Machine Data

Electrical / Pneumatic Setup

Electrical: 220 VAC, 15amp, 50/60 Hz Single Phase

Pneumatic: 80 PSI, 5 SCFM avg.
Set the low pressure switch to 60 PSI

Machine Setup

Position the machine in a desired location on a sound and reasonably level floor.

Make sure that there is sufficient lighting over the machine.


Remove all packing material.

Adjust the jack screws so that the casters are about 1/8" off the floor.


Connect electrical power and compressed air as specified above and in accordance to local codes.

Open the main control box door in front of the machine. Turn on the ON/OFF circuit breaker located in the top right corner by pressing the green button. The green light inside the button should illuminate.

Turn the main air lock-out valve (red knob before the main pressure regulator) to the ON position.

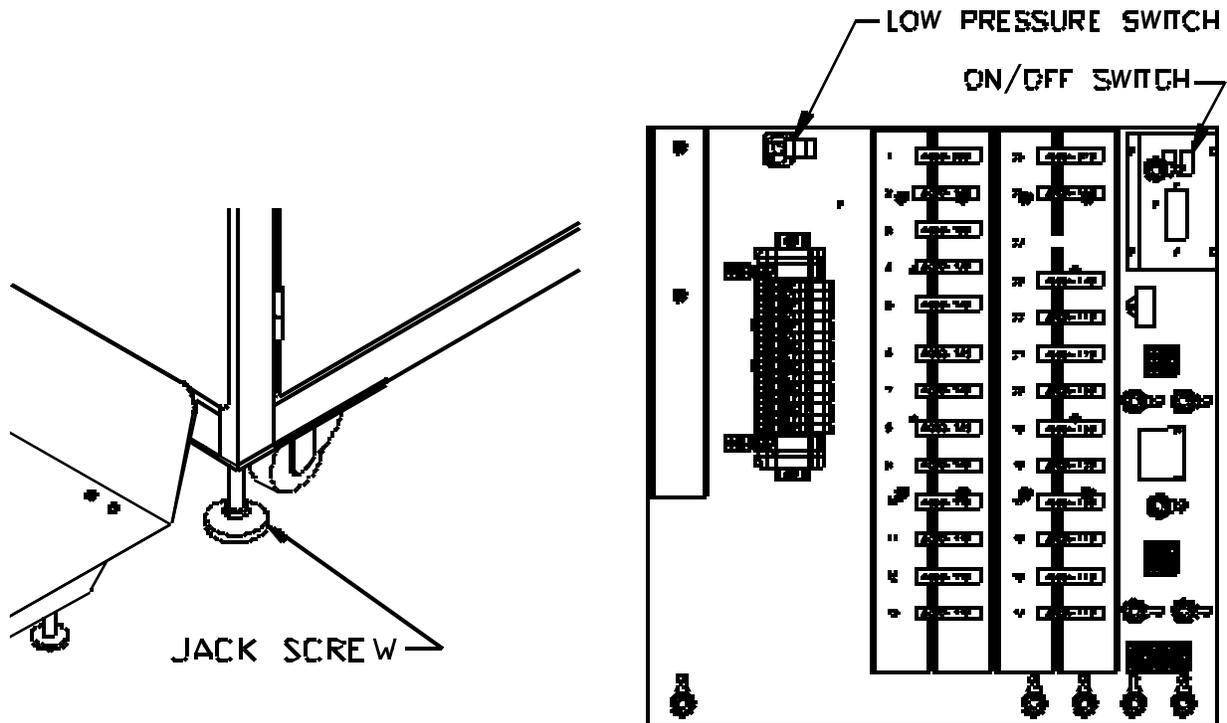


Component Identification

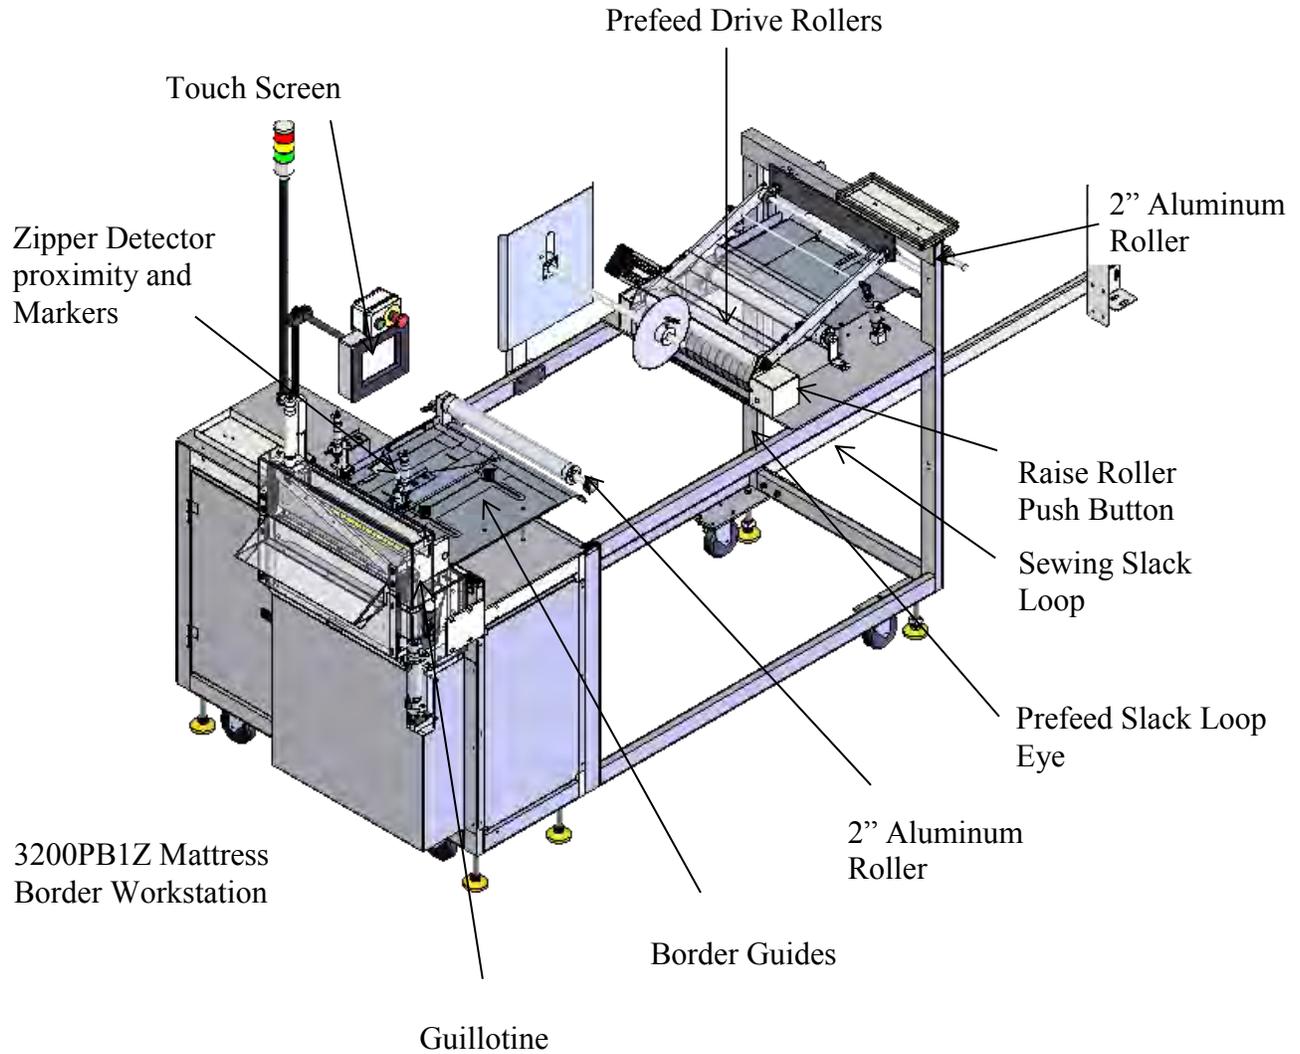

Touch Screen Operation

The graphic images presented on the touch screen show “3-dimensional” buttons, which may be pressed to access other screens, change counters and timers, or actuate hardware. Areas lacking the “3 dimensional” border contain information only. Counters are identified with the “+” and “-” buttons in the corners. These counters may be adjusted by pressing the “+” and “-” boxes. Pressing Reset from any screen clears all machine functions and returns to the main Ready page. Normal operation of the machine is controlled from the main Ready menu. From here you can start the Auto Cycle. The main Ready menu allows anyone to access the necessary functions and adjustments needed for normal operation of the machine.

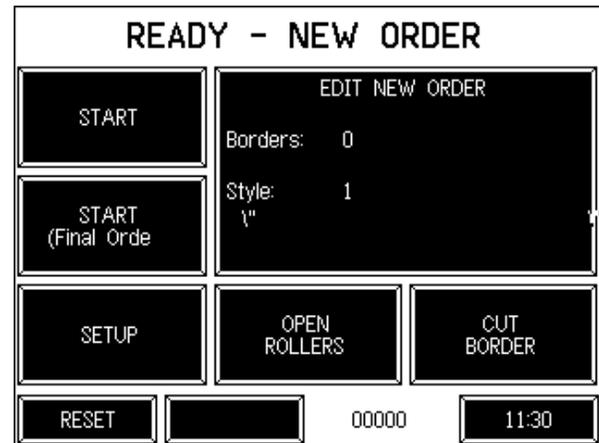

Light Tower Function

The purpose of the 3200PB1Z light tower is to indicate the current status of the machine at some distance away from the machine. This makes it easy to see machine status at a glance. Definitions for the different light states currently available on the 3200PB1Z are listed below.

Light Status	Definition
Green Steady	Normal, machine producing borders
Green Flashing	Machine producing borders but will stop soon for bobbin change.
Yellow Steady	Normal, machine powered but idling between borders.
Yellow Flashing	Machine stopped in middle of order and needs operator activity before continuing.
Red	Not currently utilized. Available for future use.

Machine Operation

This machine makes borders from pre-measured zippers and adds four corner marks, one label mark, and one closer mark. Borders are cut to length based on the position of the zipper stop crimp. Turn on the power and select the desired language (if other than English) and wait until the touch screen displays the Ready – New Order screen.

Initial Border Loading Procedure:

Press the Open Rollers Button, the guillotine roller and the prefeed roller will lift. Open the material guides slightly wider than the border to be loaded. If the leading edge of the border is not of good quality, cut off the bad part and square up the end. This will make loading easier. Insert the border into the prefeed between the 2” aluminum roller and the 3/4” rod, under the right edge guide plate, and between the feed rollers. Adjust the left prefeed edge guide to fit the border loosely.

Then feed the border under the other 2” aluminum roller, (over the angled rod) and into the guides so that the flanging is under the lower guide plate and the border is between the left and right guides. The zipper must be under the hold down spring near the zipper detector proximity switch. Continue to feed the zipper through the guillotine until the front edge of the zipper stop is even with the lower knife blade. Adjust the left main guide to fit the border loosely. Lower the rollers.

***** Keep hands, fingers, etc., away from the knife blades. Never stick anything in the knife except border material. ***

Making Borders:

Press the "Edit New order" button and "Border Style" button to select the desired style. Enter access code if necessary (default code is “22222”). Use the "Style List" button to review available styles. Use the "Borders" setting to enter number of borders to make. "Exit" back to main screen. The "Ready" screen shows # Borders desired, # Borders made (If more than 1), Compensation #, Style #, and Style Name.

Press the "Start" button. The "Initializing" screen will appear, the rollers will open and the machine will display a message to check the position of the zipper stop. It should be positioned with its leading edge even with the lower knife blade.

***** Keep hands, fingers, etc., away from the knife blades. Never stick anything in the knife except border material. ***

Press "Continue" button. The rollers will close, the border will feed backwards a distance equal to the "Leading Edge Cut Distance" setting, and the knife will trim the border. If either of the slack loop eyes are not covered the machine will prefeed the border and/or sew new border until both slack loops are filled and then the machine will begin feeding and marking the border.

The machine will make six marks on the border, the last one being the closer mark. After the closer mark the machine will detect the zipper stop and position the border in the guillotine and cut the border to length. If multiple borders are selected the machine will continue to make borders until the order is complete. If the machine cannot find the zipper stop within the "Zipper Seek Distance" setting distance after the closer mark, the machine will stop with an error message. Follow instructions on screen.

If the feeding process is interrupted with a "Pause" button press, it can be resumed with the "Continue" button. If the machine stops due to a "Fault", read the message on the screen, resolve the fault condition,

and press "continue". You can also press "reset" and return to the ready screen where you can cancel the existing order.

Creating or Editing a Style or temporarily modifying an existing style:

If editing an existing style, write down the style number from the "Ready" screen. You will need this number later. If creating a new style, go to the "Style List" and select an available unused style number. Write this number down, you will need this number later.

From the "Ready" screen press "Edit New Order".

Press "Edit Style" (enter access code if necessary)

In the "Create/Edit Style 1" page press either the top left or right arrow button to go to the "Create/Edit Style 2" page. Press the dark area of each setting button to bring up the keyboard. Enter the desired setting and press "Enter" to save new setting or "Abort" to exit without changing. After entering all six settings, press either the top left or right arrow button to go back to the "Create/Edit Style 1" page.

Enter the desired Compensation setting.

If this is a new style:

Press "Description" to go to the keypad and enter the desired description. Press "Enter" to save the new description or "Abort" to exit without changing. Press "Save Style", enter the new style number selected earlier. Press "Enter" to save new style or "Abort" to exit without changing. Exit all the way back to the Ready screen. The new style should appear on the "New Order" screen.

If this is an edit to an existing style:

Press "Save Style", enter the existing style number selected earlier. Press "Enter" to save the modified style or "Abort" to exit without changing. Exit all the way back to the Ready screen.

If this is a temporary change to an existing style:

Press "Exit" from the "Create/Edit Style 1" page without saving. Exit all the way back to the Ready screen. Notice that the Style # is "0" indicating that the current style has been temporarily changed. To restore permanent settings, reload the style from the Edit Style menu.

Short Roll Mode:

On the "Edit Style" screen there is a setting called "Short Roll Enable". Setting this to "1" allows you to run one individual border from the auxiliary roll holder mounted in front of the border guides. (The border quantity automatically resets to "1") When the machine is run in this mode the prefeed roller and sewing station are disabled. When finished, set the "Short Roll Enable" setting back to "0".

Setting Up to Make Borders

Setup Screen

Show All Settings: When this button is pressed, all of the values for the different settings are displayed in a table format.

System Information: Pressing this button allows users to view the machine version and serial number, the software revision and controller serial number, and the total piece count.




Advanced Setup: Pressing this button gives access to 2 screens of adjustments that can be made. When a button on one of the screens is pressed, it will give an explanation of what the adjustment is and allow the adjustment to be made.

Advanced Manual: Pressing this button gives access to 3 screens of adjustments that will allow the user to manually activate individual functions of the unit.

Contrast: Pressing the “+” and “-” will raise and lower the contrast of the screen for better visibility.

Settings:

1. Border chop pause enable
0=off, guillotine active
1=on, machine pauses without cutting
Press “manual cut” to cut or “continue” to resume feeding without cutting
2. Knife to marker distances
Used to “calibrate” the hardware position between the guillotine knife and the markers.
3. Knife to zipper detector
4. Leading edge cut distance
Used to calibrate the leading edge trim position for the zipper stop.
5. Marker enable
1=on
0=off
6. Marker on time
(6) x 100ms
7. Short roll enable
1=on
0=off

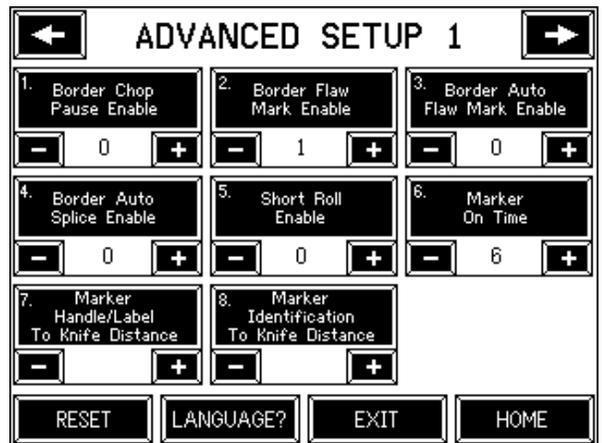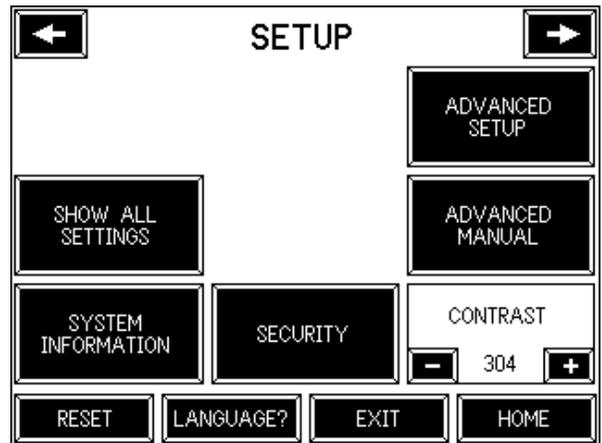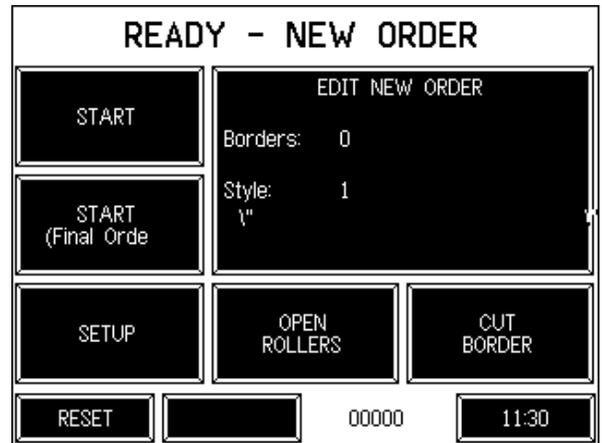

Security: Pressing this button allows the user to raise their security clearance with a 5 digit security code.

MECHANIC SECURITY			
Enter your 5 digit security code followed by the ENTER button. Valid codes begin with a "3" or "2".	1	2	3
	4	5	6
	7	8	9
	ENTER	0	ABORT
	HELP?		

Machine Adjustments

The following adjustments will have already been made before the unit is shipped from the factory.

- Adjust the spring screw on the guillotine to make sure the blade cuts the material.
- Adjust the roller down cylinder so that the rollers touch with little or no pressure.
- Adjust the cylinders on the prefeed rollers the same.

3200PB1Z-Prefeed Motor Parameter Settings

Before Programming, Perform a Master Reset of Parameters (See Below)

PARAMETER	RANGE	VALUE	DESCRIPTION
290		0	Mode of operation. MUST SET THIS PARAMETER FIRST!
026		0	
121	300>	300	Lower limit for Par 111 (must set before 111)
111	0-999	0310	Maximum speed when "129" is 0, 1, or 2.
119	1-3	1	Linear acceleration
153	0-50	0	Braking power at standstill
161	0-1	1-CCW	Motor rotation
207	1-55	1	Braking
220	1-55	1	Acceleration
240	0-56	55	Enable reverse run of motor with input 1
270	0-5	5	No handwheel sensor
272	020-255	1000	Drive ratio between motor pulley and handwheel pulley. If handwheel pulley is smaller than motor pulley, increase this value to slow down sewing head until measured speed matches speed set with parameter 111.
436		0	
401		1	

Front panel LED's:

- LED 1: Off
- LED 2: Off
- LED 3: Off
- LED 4: Off
- LED 5: Off
- LED 6: Off
- LED 7: Off, Stop at needle down.
- LED 8: Off

Programming Instructions:

1. Power on holding down the "P" button till "CODE" is displayed.
2. Press ">>" once and enter the number "5913"
3. Press "E" once and "4.0.0." is displayed this is a parameter
4. Proceed to the parameter to be changed and press "E"
5. The value now shows in the screen, adjust to desired value.
6. Press "E" to enter value and continue with parameter setting.
7. Repeat for other parameters, press "P" once when complete.
8. Run sewing head to save parameters before powering down

To Perform Master Reset of Parameters:

1. Power on holding down the "P" button till "CODE" is displayed.
2. Press ">>" once and enter the number "5913"
3. Press "E" twice and "093" is displayed.
4. Press "+" once, "094" is displayed.
5. Press "P" to exit programming mode with all default values.

Speed	RPM	Treadle/Low
Fast	95	C
Slow	95	A, C

3200PB1Z Main Feed Motor Parameter Settings

Before Programming, Perform a Master Reset of Parameters (See Below)

PARAMETER	RANGE	VALUE	DESCRIPTION
290		0	Mode of operation. MUST SET THIS PARAMETER FIRST!
026		0	
110	70-390	70	
121	300>	300	Lower limit for Par 111 (must set before 111)
111	0-999	310	Maximum speed when "129" is 0, 1, or 2.
119	1-3	1	Linear acceleration
153	0-50	35	Braking power at standstill
161	0-1	1-CCW	Motor rotation
207	1-55	35	Braking
220	1-55	1	Acceleration
240	0-56	55	Enable reverse run of motor with input 1
270	0-5	5	No handwheel sensor
272	020-255	1000	Drive ratio between motor pulley and handwheel pulley. If handwheel pulley is smaller than motor pulley, increase this value to slow down sewing head until measured speed matches speed set with parameter 111.
436		0	
401		1	

Front panel LED's:

- LED 1: Off
- LED 2: Off
- LED 3: Off
- LED 4: Off
- LED 5: Off
- LED 6: Off
- LED 7: Off, Stop at needle down.
- LED 8: Off

Programming Instructions:

1. Power on holding down the "P" button till "CODE" is displayed.
2. Press ">>" once and enter the number "5913"
3. Press "E" once and "4.0.0." is displayed this is a parameter
4. Proceed to the parameter to be changed and press "E"
5. The value now shows in the screen, adjust to desired value.
6. Press "E" to enter value and continue with parameter setting.
7. Repeat for other parameters, press "P" once when complete.
8. Run sewing head to save parameters before powering down

To Perform Master Reset of Parameters:

1. Power on holding down the "P" button till "CODE" is displayed.
2. Press ">>" once and enter the number "5913"
3. Press "E" twice and "093" is displayed.
4. Press "+" once, "094" is displayed.
5. Press "P" to exit programming mode with all default values.

Speed	RPM	Treadle/Low
Fast	56	C
Slow	30	A, C

Machine Maintenance

Regularly scheduled maintenance of the 3200PB1Z unit reduces possible problems and downtime. Proper care will also ensure a longer life and better performance of the machine.

Perform the following procedures to properly maintain the machine.

1. Clean the machine daily at the end of every shift.
 - A. Wipe all photo eye lenses with a clean, nonabrasive, dry cloth.
 - B. Use blow-off hose to get rid of excess lint, thread and other clippings.
2. Check air filters weekly; replace filter elements once every six months.
3. Lubricate the bearing block on the guillotine knife once every three months using standard sewing head oil. The oiling hole is located on the top face of the bearing block, and it is indicated by a red paint mark.
4. Apply Accrolube™ grease to the recessed cavity on the back side of the top blade side plate of the guillotine knife. This will improve performance and extend the life of the blade.

Electric Eye Sensor Adjustment

To adjust the sensor, first remove the clear plastic cover from the end of the sensor. There are two adjusting screws under the cover. One is labeled “GAIN” and is used to set the sensitivity of the sensor. The other screw is labeled “DO & LO” and should always be fully clockwise.

With the end of the sensor pointing at the center of the reflective tape, turn the “GAIN” screw counter-clockwise until the red LED indicator is off. Then turn the “GAIN” screw clockwise until the LED indicator comes on. Then turn the “GAIN” screw one full turn clockwise. The LED indicator should be blinking slowly. Cover the eye so that the sensor cannot see the reflective tape and the LED should go off.

Reflective Tape Maintenance

Use a soft cloth for cleaning.

Do not use chemicals or abrasives to clean it.

Avoid any contact with oils and liquids.

Do not touch the tape with bare fingers.


If tape is dirty or opaque, the eye may not function correctly.

Assembly Drawings & Parts Lists

The materials contained herein are confidential and proprietary information of Atlanta Attachment Company. In addition to any confidentiality and non-disclosure obligations that currently exist between you and Atlanta Attachment Company, your use of these materials serves as an acknowledgment of the confidential and proprietary nature of these materials and your duty not to make any unauthorized use or disclosure of these materials.




One-Stop Shopping
For Expendable Replacement Parts for AAC & Other Bedding Equipment Suppliers
Toll Free: **1-866-885-5100**
www.atlantapartsdepot.com • sales@atlantapartsdepot.com

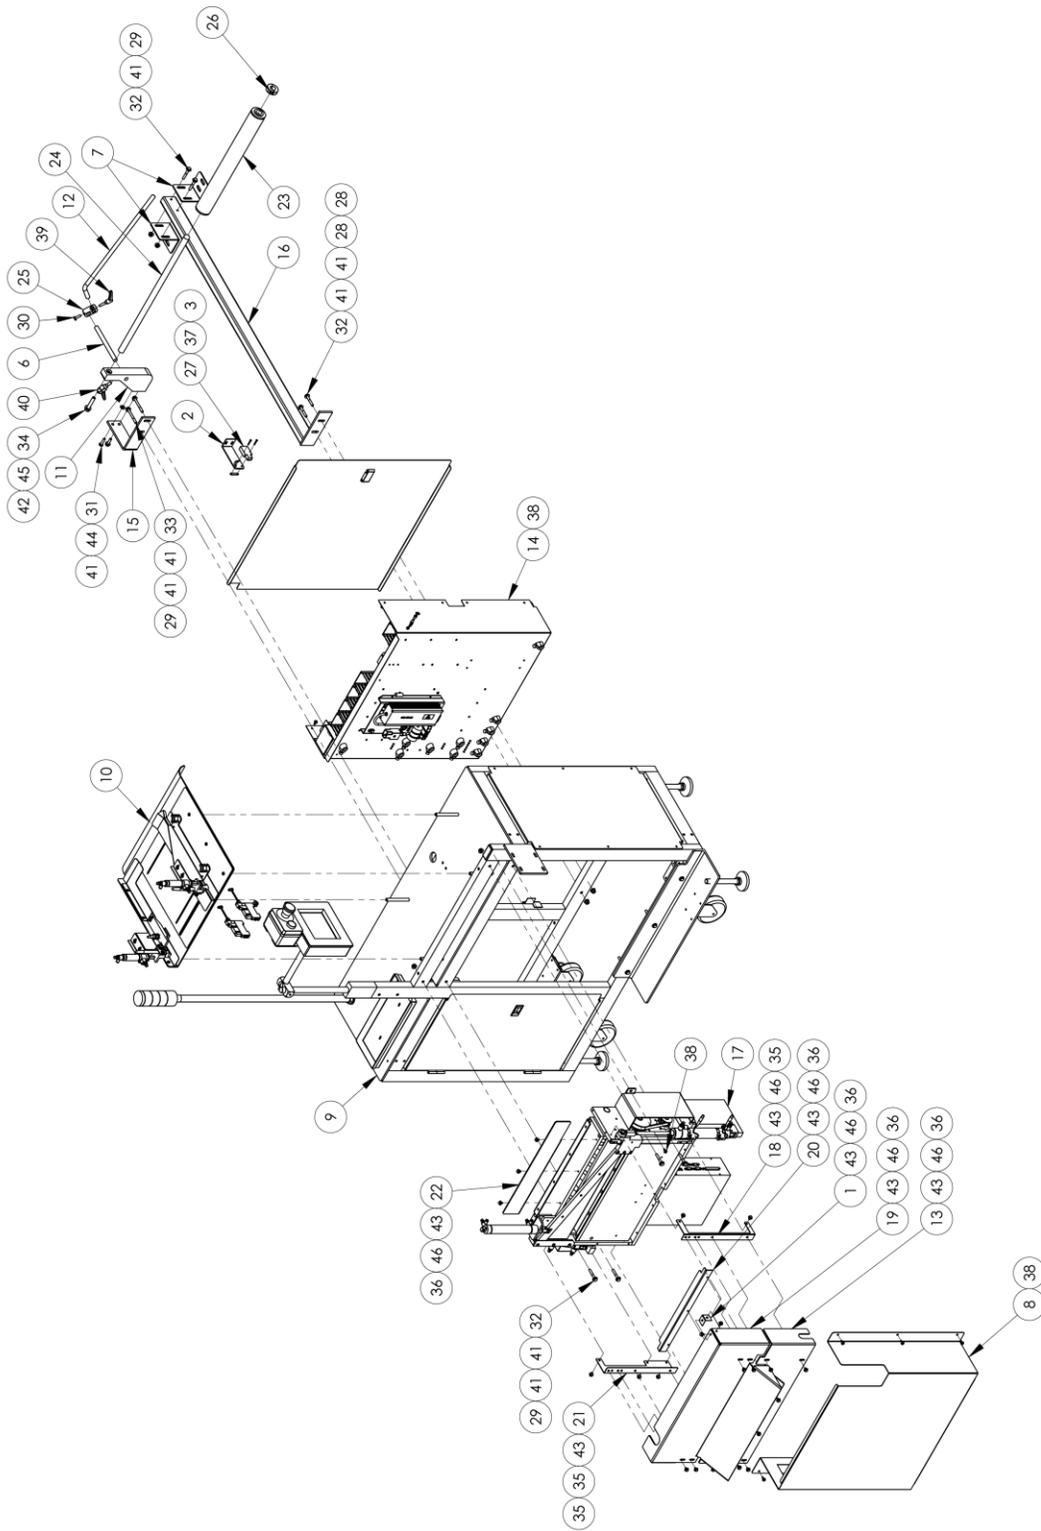

33200PB1Z Measure & Cut Border Workstation

AAC Drawing Number 9004380 Rev 4


NO	QTY	PART #	DESCRIPTION
1	1	98-6819A	BRKT,CORNER 2 x 10-32
2	1	1278-6689E	BRACKET, EYE MOUNT
3	1	1975-412A	PLATE,NUT,4-40,.95CTC
4	AR	3200PB1Z-PD	DIAGRAM, PNEUMATIC
5	AR	3200PB1Z-WD	DIAGRAM, WIRING
6	1	8732-0340	ROD,STRA,1/2X6,1018
7	2	1330215	BRACE, FRAME
8	1	3200180	PANEL, EFKA BOX COVER
9	1	3200332	CONSOLE, 3200PB1Z
10	1	3200333	DUAL TOP MARKER PEN
11	1	3200336	MOUNT,IDLER ROLL,ROD MNT
12	1	3200337	ROD,BENT,1/2X2X16,70DEG
13	1	3200354	COVER,BOTTOM GUILLOTINE
14	1	3200357	CONTROL PANEL
15	1	3200359	PLATE, MOUNT, ROLLER
16	1	3261002	FRAME, JOINING, 36"
17	1	32004000PB1	GUILLOTINE ASSEMBLY
18	1	33004033A	BRACKET,GUARD,LEFT SIDE
19	1	33004034B	GUARD, TOP HALF,3300RA
20	1	33004035	GUARD, BOTTOM
21	1	33004037	BRACKET,GUARD.LEFT SIDE
22	1	33004048B	SHIELD, TOP, GUILLOTINE
23	1	33005689C	ROLLER,17.25L,2 OD,.75 ID
24	1	33008202	ROD,ROLL,SST,3/4X21 W/RAD
25	1	A-U	ROD CROSS BLOCK
26	1	CCCL12F	COLLAR,CLAMP,3/4 BORE
27	1	FFSM312LVQ	EYE,ELECTRIC,10-30VDC
28	4	NNH1/4-20	NUT,HEX,1/4-20
29	6	NNK1/4-20	NUT,HEX,KEP,1/4-20,W/LOCK
30	1	SSHC01048	1/4-20 X 3/4 HEX CAP
31	2	SSHC01064	1/4-20 X 1 HHCS
32	8	SSHC01112	HEX HEAD BOLT 1/4-20X1.75
33	2	SSHC01160	1/4-20 X 2-1/2 HHCS
34	1	SSHC25128	3/8-16 X 2 HEX CAP
35	5	SSHC95024	SCREW, HEX CAP
36	16	SSHC98024	10-32 X 3/8 HEX CAP
37	2	SSPS70048	4-40 X 3/4 PAN HD SLOTTED
38	17	SSZS93032	SCREW, SHT.METAL 10 ZIP
39	1	TTH32415	HANDLE,THDED,1/4-20X7/8
40	1	TTH32425	HANDLE,THRDED,5/16-18X3/4
41	22	WWFS1/4	WASHER,FLAT,SAE,1/4
42	1	WWFS3/8	WASHER,FLAT,SAE,3/8
43	21	WWFS10	WASHER, FLAT, #10, SAE
44	6	WWL1/4	WASHER,LOCK,1/4
45	1	WWL3/8	WASHER, LOCK, 3/8
46	21	WWL10	WASHER,LOCK,#10

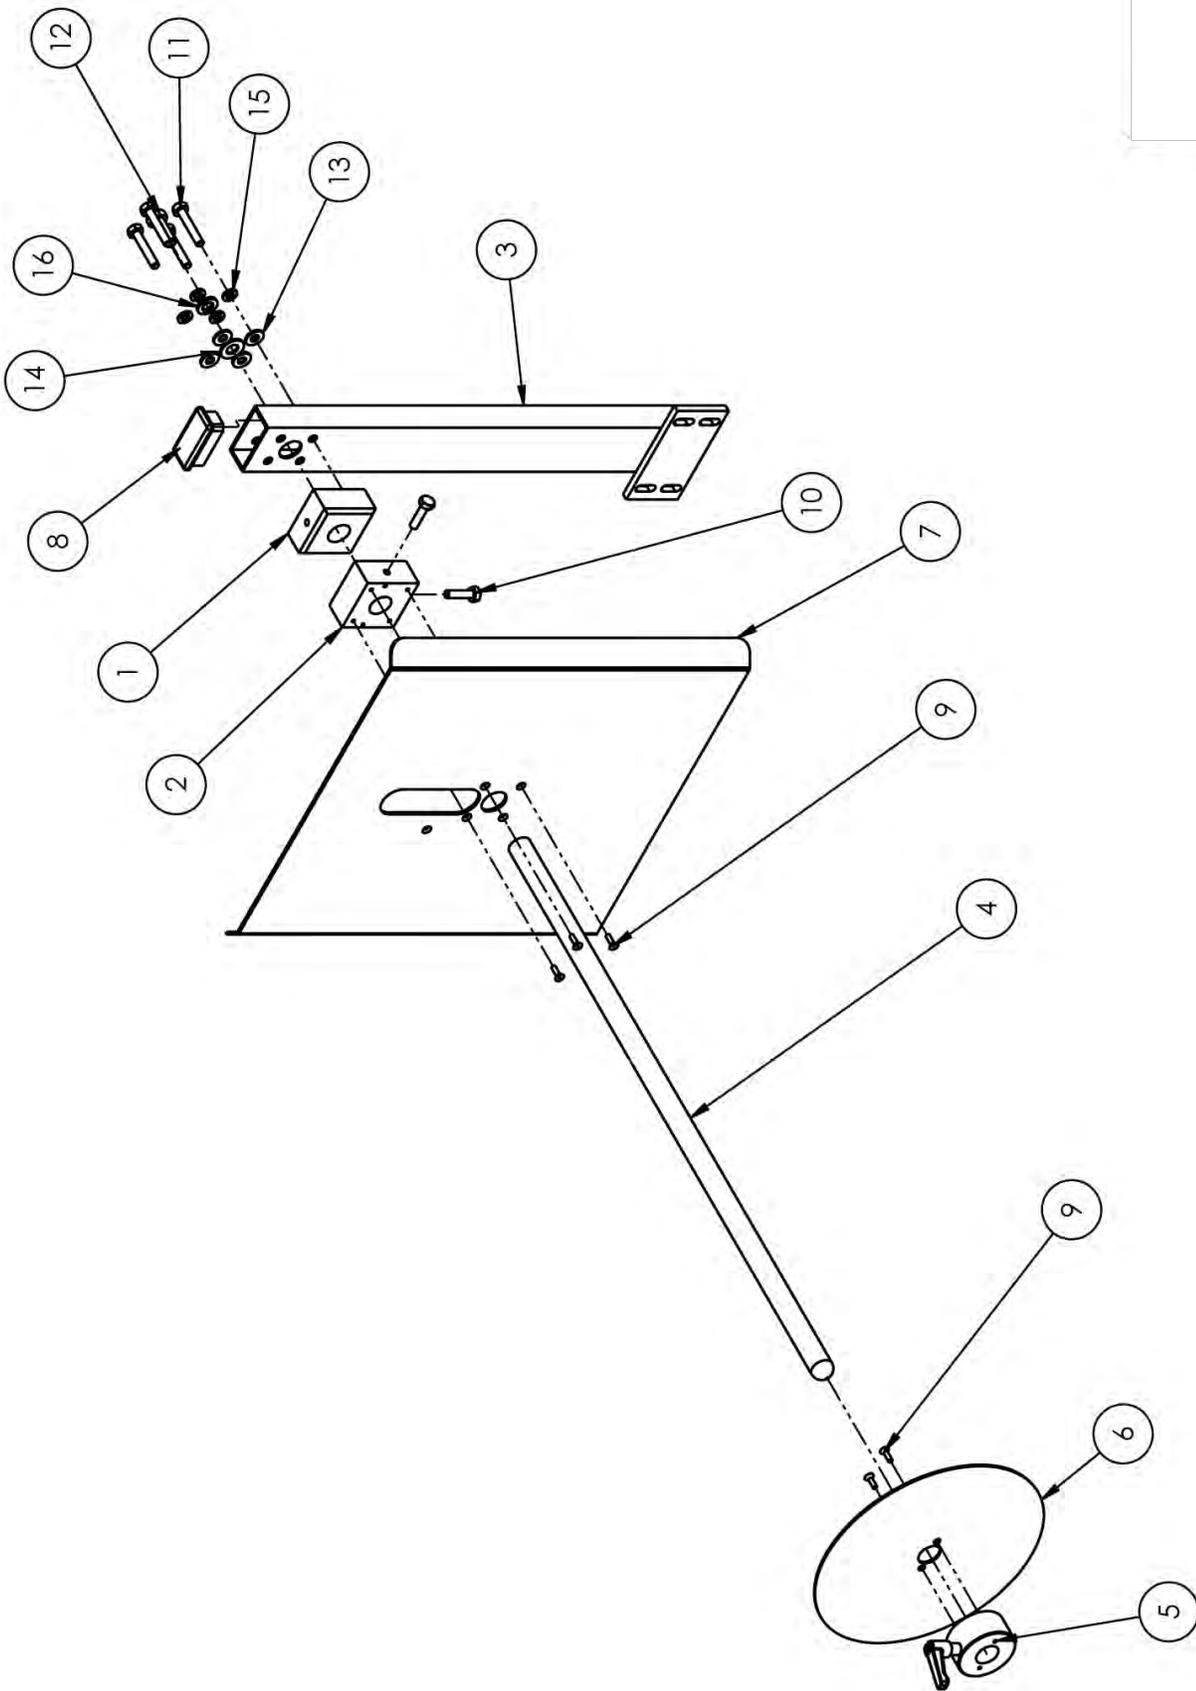

3200085 Small Roll sewing Rod Assembly

AAC Drawing Number 3200085 Rev0


NO.	QTY	PART #	DESCRIPTION
1	1	1961-251A	HUB, UNWIND SHAFT
2	1	1961-253A	HUB, UNWIND STAND
3	1	3200092	WELDMENT,MID ROD MOUNT
4	1	32005004	ROD,SS,3/4 X 24.0L
5	1	360-116	HUB, LOCKING
6	1	784-08-050	DISC,BB,SP,8" DIA
7	1	784B-1414	PLATE, ALU, 14' X 14"
8	1	MM132-1496	PLUG 1 X 2
9	6	SSFC80032	#6-32 X 1/2 FLAT ALLEN
10	2	SSHC01064	1/4-20 X 1 HEX HEAD
11	4	SSHC01096	1/4-20 X 1-1/2 HEX HEAD
12	1	SSHC25064	3/8-16 X 1 HEX HEAD
13	4	WWFS1/4	WASHER FLAT, 1/4
14	1	WWFS3/8	WASHER, FLAT, 3/8
15	4	WWL1/4	1/4 LW
16	1	WWL3/8	3/8 LW

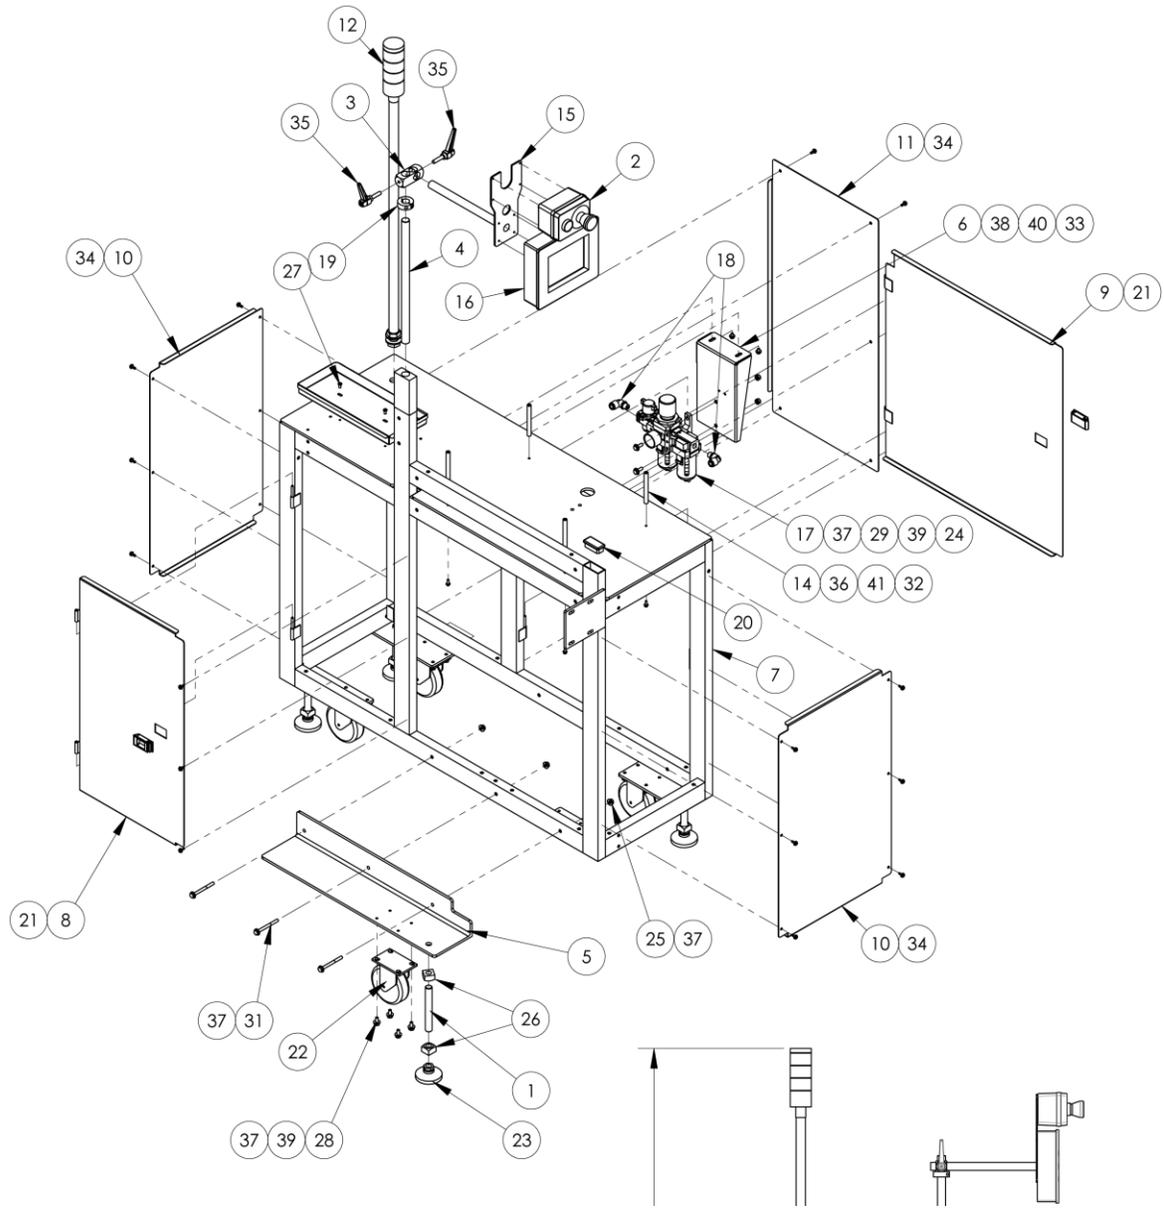

3200332 Console 3200PB1Z

AAC Drawing Number 3200332 Rev 1


NO	QTY	PART #	DESCRIPTION
1	4	0411-1063	THREADED ROD
2	1	1278-6010	START/STOP BUTTON ASSY
3	1	SSHCM8X20	SCREW, HEX CAP
4	1	28203	ROD, STRAIGHT, 3/4X11"
5	1	3200212	PLATE, CASTER EXTENSION
6	1	32003033	BRKT,REGULATOR,DUAL
7	1	32003500P	FRAME WELDMENT
8	1	32005011	DOOR, FRONT
9	1	32005012	DOOR, REAR
10	2	32005015	PANEL, SIDE
11	1	32005027	PANEL, REAR
12	1	33001130	LIGHT ASSY
13	1	33005534	TOOL TRAY, 1X5X12
14	4	33005623	STANDOFF
15	1	40-112A	MOUNT, TOUCH SCREEN
16	1	4080-003	CONTROLLER,SBUS,V3
17	1	AA198-5110	FILTER/REGULATOR/LOCKOUT
18	2	AAQME-3-4	MALE ELBOW 3/8OD TUBE
19	1	CCCL12F	CLAMP COLLAR- 3/4
20	1	MM132-1496	PLUG 1 X 2
21	2	MM40450010	FASTENER,SLIDE LOCK
22	4	MM431-4	CASTER,4",W/LOCKS
23	4	MML-2	LEVELING PAD, 5/8-11
24	2	NNH1/4-20	NUT,HEX,1/4-20
25	3	NNK1/4-20	NUT,KEP,1/4-20
26	8	NNSH5/8-11	NUT, SQUARE, 5/8-11
27	2	SSBC98024	10-32 X 3/8 BUTTON CAP SC
28	16	SSHC01040	1/4-20 X 5/8 HHCS
29	2	SSHC01048	1/4-20 X 3/4 HEX CAP
30	2	SSHC01064	1/4-20 X 1 HHCS
31	3	SSHC01176	1/4-20 X 2-3/4 HHCS
32	4	SSHC90032	#8-32 X 1/2 HEX CAP
33	2	SSHC98024	10-32 X 3/8 HEX CAP
34	20	SSZS93032	SCREW, SHT.METAL 10 ZIP
35	2	TTH32426	HANDLE,THRD,5/16-18X1-1/4
36	4	WWF8	WASHER, FLAT, #8
37	24	WWFS1/4	WASHER,FLAT,SAE,1/4
38	2	WWFS10	WASHER, FLAT, #10, SAE
39	18	WWL1/4	WASHER,LOCK,1/4
40	2	WWL10	WASHER,LOCK,#10
41	4	WWL8	WASHER,LOCK,#8

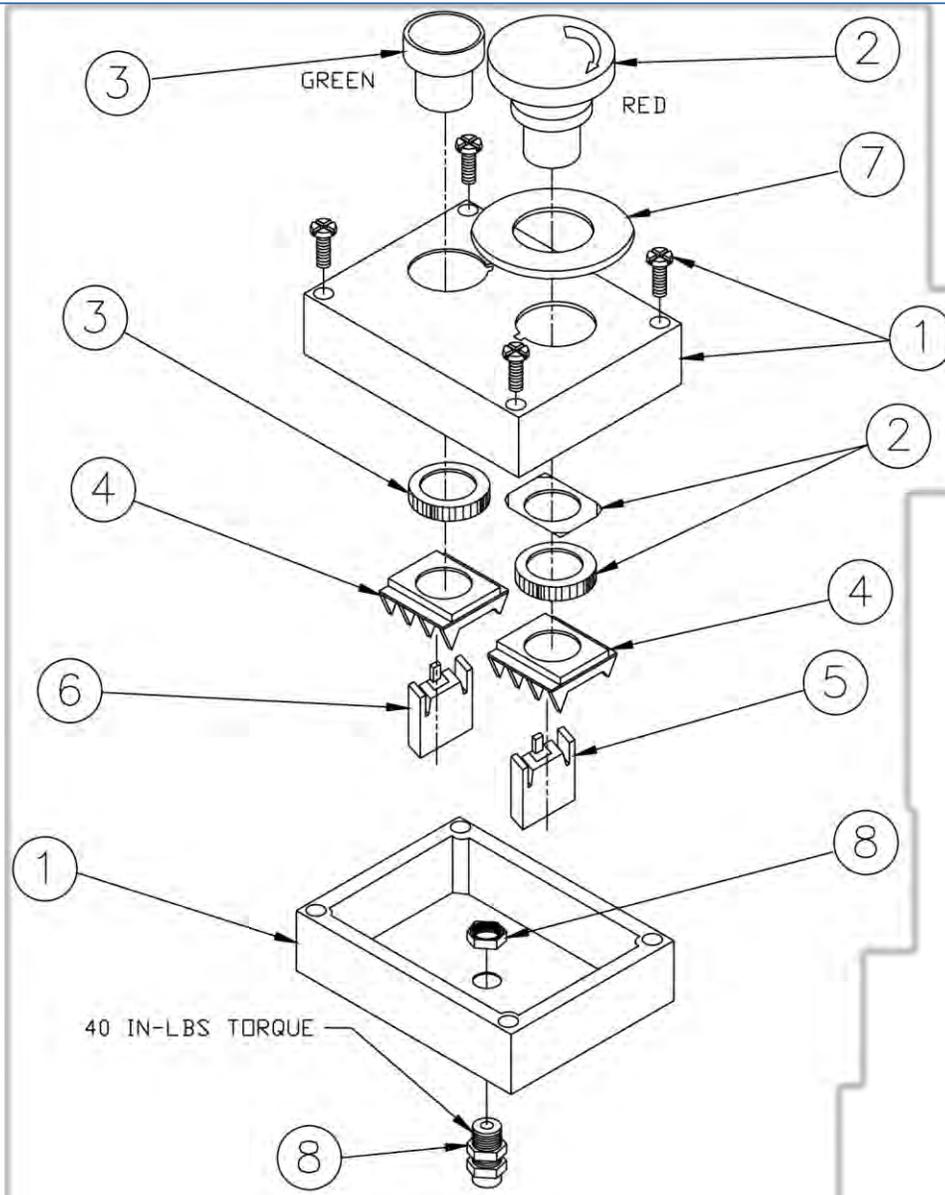

1278-6010 Start / Stop Button Assembly

AAC Drawing Number 191058B Rev 3


NO.	QTY	PART #	DESCRIPTION
1	1	EEPCB65GM	ENCLOSURE MODIF.
2	1	EEPMTS44	E-STOP BUTTON
3	1	EEPF3	START BUTTON
4	2	EEA3L	MOUNTING LATCH
5	1	EE3X01	CONTACT BLOCK N.C.
6	1	EE3X10	CONTACT BLOCK N.O.
7	1	EE15Y	LEGEND PLATE
8	1	FF3210	STAIN RELIEF
9	1	4080-4214	CABLE

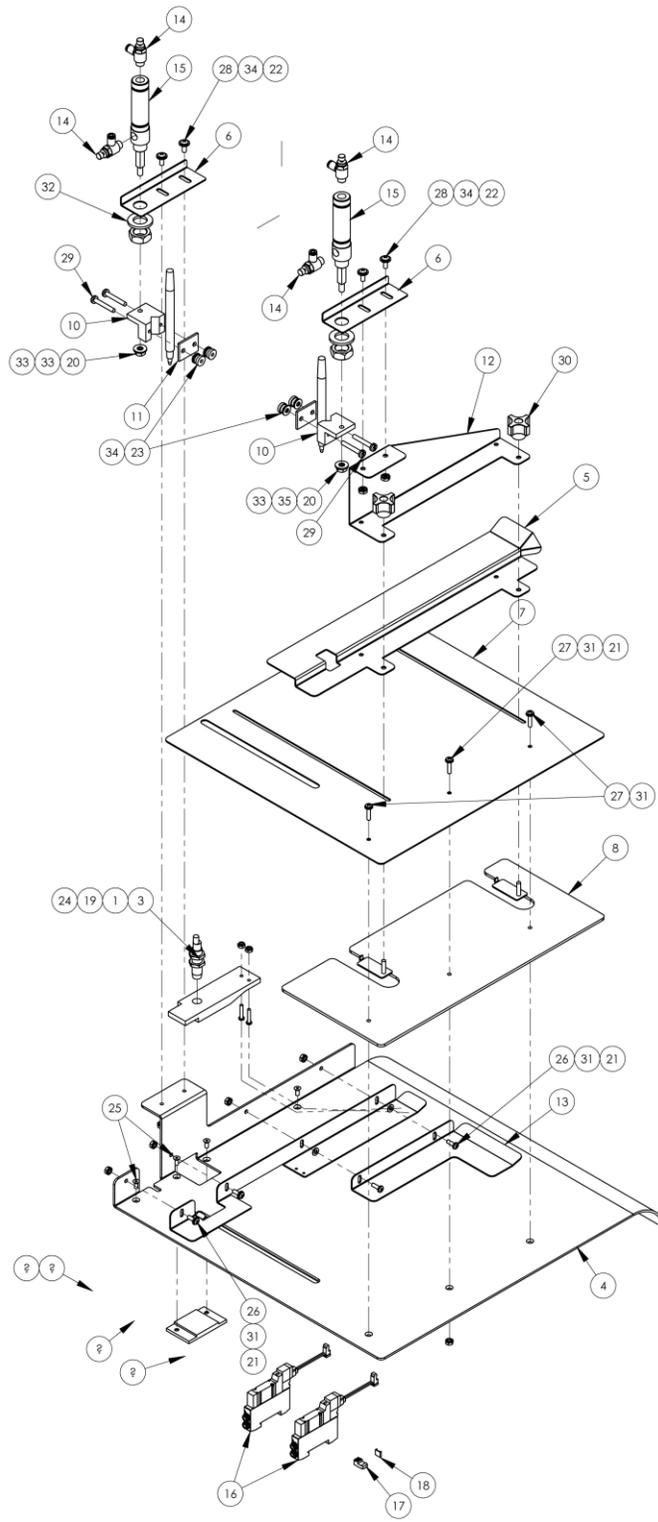

3200333 Dual Top Marker Pen

AAC Drawing Number 3200333 Rev 4


1	1	1330334	ZIPPER HOLD-DOWN	19	2	NNE6-32	NUT,ELASTIC LOCK,6-32
2	1	1330335	PROX SENSOR PLATE	20	2	NNJ1/4-28	NUT, HEX, JAM, 1/4-28
3	1	1391-CAB1	PROX SWITCH W/PLUG	21	5	NNK8-32	NUT,KEP,8-32
4	1	3200285	PLATE, CLOTH	22	4	NNK10-32	KEP NUT, 10-32
5	1	3200287	GUIDE,GUILLOTINE,LEFT	23	4	NNT032	NUT,THUMB SCREW,10-32
6	2	3200288	MARKER CYL BRACKET	24	2	SSPS80048	#6-32 X 3/4 LG PAN HD
7	1	3200289	PLATE, FLANGE GUIDE	25	4	SSFC90024	8-32 X 3/8 FL ALN CAP
8	1	3200291	SPACER, FLANGE GUIDE	26	4	SSPP90032	SCREW,8-32 PAN HD PHIL
9	2	3200292	CLAMP PLATE W/STUD	27	3	SSPP90048	#8-32 X 3/4 PAN HD PHIL
10	2	3200295	PEN HOLDER, 10MM	28	4	SSPP98032	10-32 X 1/2 PAN PHIL
11	2	3200301	WASHER PLATE, #10	29	4	SSPS98080	10-32X1-1/4 PAN HD SLOT
12	1	3200322	MOUNT,MARKER,LEFT	30	2	TTCL1APPK1	PLASTIC KNOB, #10-32
13	1	3200335	GUIDE, TOP	31	7	WWF8	WASHER, FLAT, #8
14	4	AA198RA508	FLOW CONTROL,5/32 X 1/8"	32	2	WWFM16	FLAT WASHER,M16
15	2	AACNRM041D	CYLINDER,AIR,DA,NR,MAGNET	33	2	WWFS1/4	WASHER,FLAT,SAE,1/4
16	2	AAESY3140-5/32	VALVE ASSY, 5/32 PORTS	34	8	WWFS10	WASHER, FLAT, #10, SAE
17	1	FF100F2203	CONNECTOR,3 PIN,22GA,RED	35	2	WWL1/4	WASHER,LOCK,1/4
18	1	FFSC10003	COVER,STRAIN RELIEF,3	36	1	3200286	GUIDE,RH

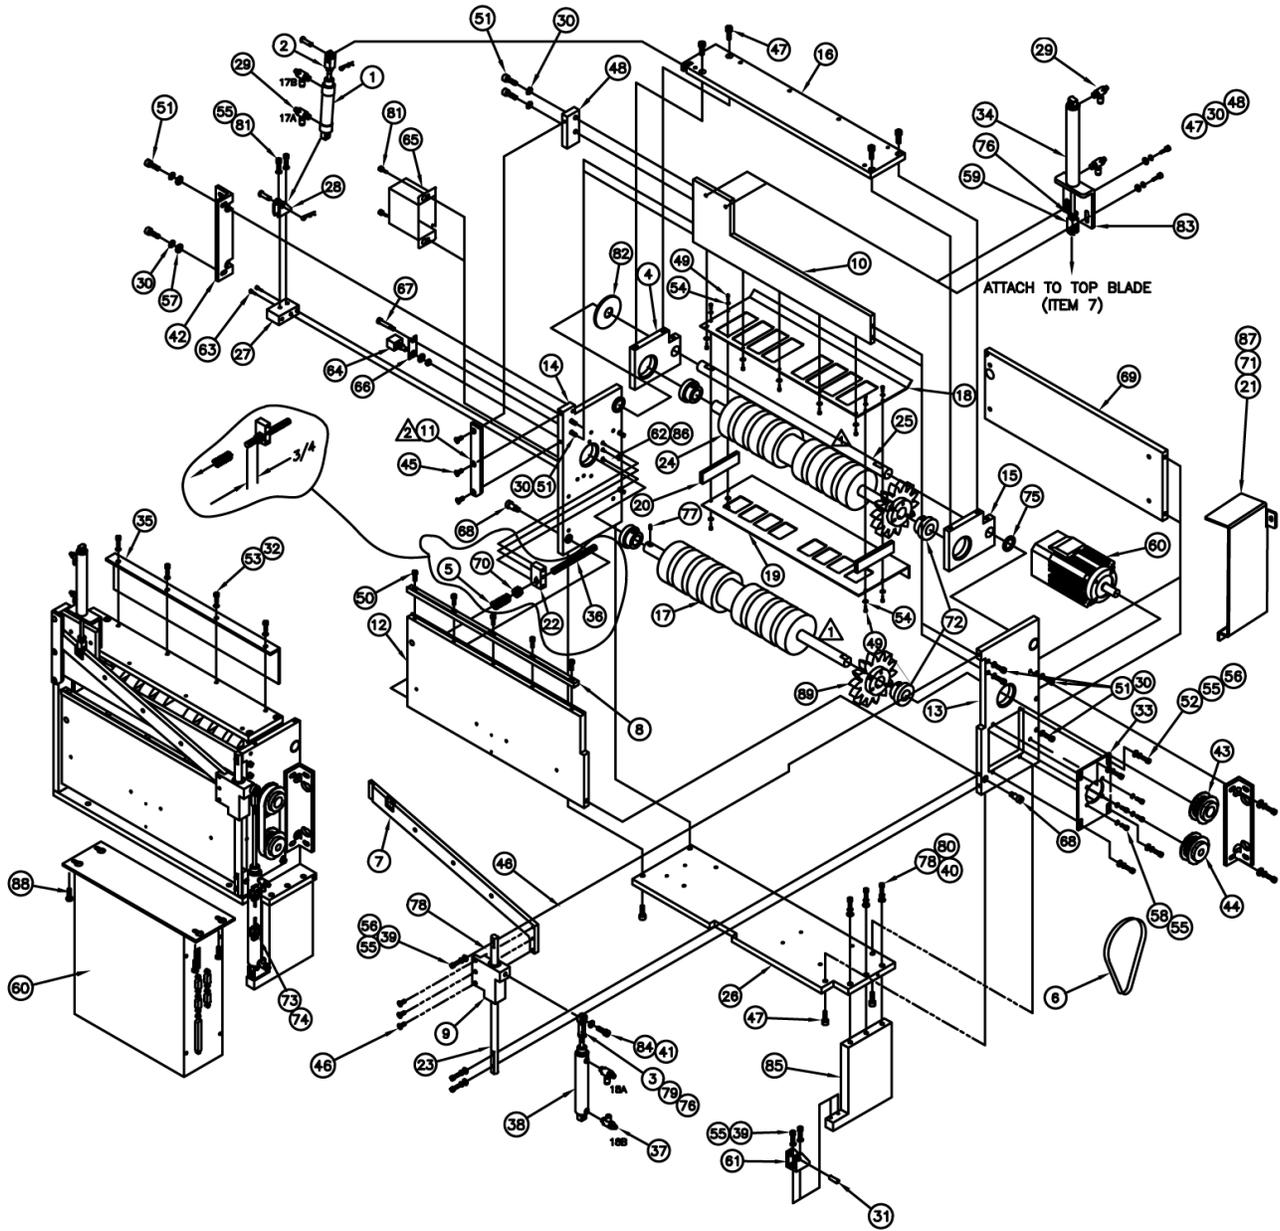

32004000PB1 Guillotine Assembly

AAC Drawing Number 192138A Rev2


NO	QTY	PART #	DESCRIPTION	NO	QTY	PART #	DESCRIPTION
1	1	AAC7DP-1	AIR CYLINDER	46	3	SSFC98040	SCREW, FLAT ALLEN CAP 10-32 X5/8
2	1	AAFCT-7	CLEVIS, AIR CYL.	47	10	SSSC01048	SCREW, SOCKET CAP 1/4-20 X 3/4
3	1	BBAW-7	BEARING, ROD END	48	1	3200129	BLOCK, PLATE RUB MNTG
4	1	33004014	ARM, TOP RIGHT	49	13	SSBC70016	SCREW BOTTON CAP 4-40 X 1/4
5	1	PRLC092H6	SPRING	50	5	SSSC98040	SCREW, SOCKET CAP 10-32 X 5/8
6	1	GG150L050	BELT, GEAR	51	14	SSSC01064	SCREW, SOCKET CAP 1/4-20 X 1
7	1	3200133	BLADE, TOP	52	4	SSSC95048	SCREW, SOCKET CAP 10-24 X 3/4
8	1	3200356	BLADE, BOTTOM	53	4	SSSC98032	SCREW, SOCKET CAP 10-32 X 1/2
9	1	3200082	BLOCK, GUIDE, TOP BLADE	54	13	WWS14	INTERNAL TOOTH WASHER
10	1	3200350	BAR, TIE	55	15	WWL10	LOCK WASHER
11	1	3200130	PLATE, RUB	56	7	WWFS10	SAE FLAT WASHER
12	1	3200349	PLATE, HINGE1	57	6	WWFS1/4	SAE FLAT WASHER
13	1	3200121	PLATE, FRONT SIDE	58	4	SSSCM5X147	SCREW, SOCKET CAP M5-0.8 X 14
14	1	33004008	PLATE, REAR SIDE	59	1	AAFCT-11	CLEVIS, AIR CYLINDER
15	1	33004009	ARM, TOP LEFT	60	1	4059-DC1500A	MOTOR & CONTROLLER
16	1	33004010	PLATE, BACK	61	1	3200083	PIVOT BRKT
17	1	33004020	ROLLER, DRIVE, BOTTOM	62	1	SSSC98080	SCREW, SOCKET CAP 10-32 X 1 1/4
18	1	3200351	GUARD, TOP ROLLER	63	2	SSSC95096	SCREW, SOCKET CAP 10-24 X 1 1/2
19	1	3200352	GUARD, BOTTOM ROLLER	64	1	EENC256	ENCODER
20	2	33004015	GUIDE, MATERIAL, INTERNAL	65	1	33004061	ENCODER COVER
21	1	3200178	COVER	66	1	33004080	BRKT, ENCODER SUPPORT
22	1	33004017	BLOCK, SPRING	67	1	SSASO16064	SCREW ALLEN SHOULDER 1/4 X 1, 10-24
23	1	3200124	SHAFT, TOP BLADE	68	2	SSASO24040	SCREW ALLEN SHOULDER 3/8 X 5/8, 5/16-18
24	1	33004011	ROLLER, IDLER, TOP	69	1	33004062	PLATE, MAIN MTG.
25	1	33004021	SHAFT, HINGE	70	2	NNJ3/8-24	NUT, JAM, 3/8-24
26	1	3200127	PLATE, BASE, GUILLOTINE	71	2	WWF8	WASHER #8
27	1	32004063	MOUNT, CYLINDER, REAR	72	4	BBS8703-88	BALL BEARING
28	1	AAFBP-11C	PIVOT BRKT	73	2	AAEHSKQ	SWITCH, HALL EFFECT
29	4	AA198RA508	FLOW CONTROL	74	2	AAF35875-11	BAND FOR AAHSKQ
30	16	WWL1/4	LOCK WASHER	75	1	33004063	SPACER
31	1	IID016X064	DOWEL PIN	76	1	273-4-503A	LEATHER WASHER
32	4	WWS110	INTERNAL TOOTH WASHER	77	1	SSSS98012B	SCREW, SOCKET SET, BRASS TIP 10-32 X 3/16
33	1	3304027A	PLATE, MTG, STEP, MTR	78	3	SSSC10080	SCREW, SOCKET CAP 5/16-18 X 1 1/4
34	1	AA095DP	AIR CYLINDER	79	1	NNJ7/16-20	NUT, JAM 7/16-20
35	1	33004050	GUARD, TOP, GUILLOTINE	80	3	WWFS5/16	5/16 FLAT WASHER
36	1	3304031	SCREW, BLADE PRESSURE ADJ.	81	2	SSSC95032	SCREW, SOCKET CAP 10-24 X 1/2
37	2	AA198RA408	FLOW CONTROL	82	1	BBTRA1220	WASHER, THRUST, STEEL
38	1	AACM125DP	AIR CYLINDER	83	1	3200102	CYLINDER MNT
39	5	SSSC95064	SCREW, SOCKET CAP 10-24 X 1	84	1	SSSC40080	SCREW, SOCKET CAP 7/16-20 X 1 1/4
40	3	WWL5/16	5/16 LOCK WASHER	85	1	3200128	MOUNT, PIVOT BRKT
41	1	WWL7/16	7/16 LOCK WASHER	86	2	SSSC98064	SCREW, SOCKET CAP 10-32 X 1
42	2	33004058A	BRACKET	87	2	SSPS90024	SCREW, PAN HD SLOTTED 8-32 X 3/8
43	1	PP24LB050M3	GEAR PULLEY	88	4	SSPS98032	SCREW, PAN HD SLOTTED 10-32 X 1/2
44	1	PP10LF050M3	GEAR PULLEY	89	2	3200343	CYCLOID GEAR, 14TH
45	3	SSFC95032	SCREW, FLAT ALLEN CAP 10-24 X 1/2				

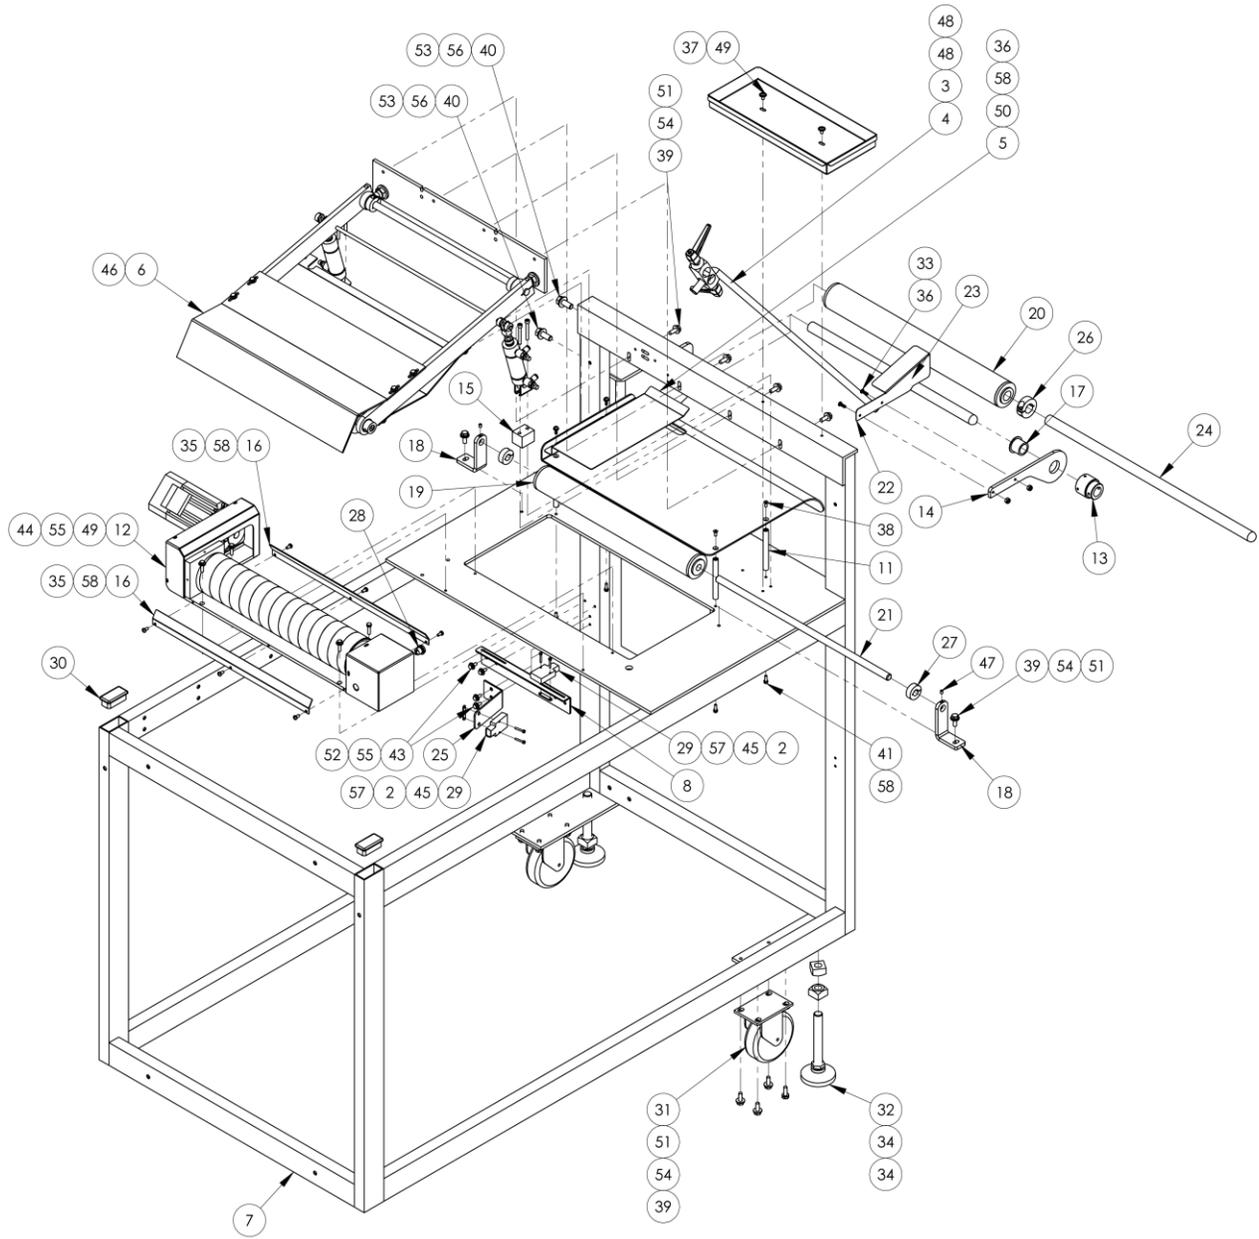

3200500 Prefeed Roller Assembly

AAC Drawing Number 3200500 Rev 2


NO	QTY	PART #	DESCRIPTION	NO	QTY	PART #	DESCRIPTION
1	2	0411-1063	THREADED ROD	30	2	MM132-1496	PLUG 1 X 2
2	2	1975-412A	PLATE,NUT,4-40,.95CTC	31	2	MM431-4	CASTER,4",W/LOCKS
3	1	SSHCM8X20	SCREW, HEX CAP	32	2	MML-2	LEVELING PAD, 5/8-11
4	1	3200337	ROD,BENT,1/2X2X16,70DEG	33	2	NNE8-32	NUT,ELASTIC LOCK, 8-32
5	1	3200338	GUIDE,BORDER,RIGHT	34	4	NNSH5/8-11	NUT, SQUARE, 5/8-11
6	1	3200501	PREFEED ROLLER ASSY	35	6	SSBC90024	8-32X3/8 BUTTON CAP
7	1	32005500P	FRAME ASSY.	36	4	SSBC90032	8-32X1/2 BUTTON CAP
8	1	32612101	BRACKET, MOUNTING,EYE	37	2	SSBC98024	10-32 X 3/8 BUTTON CAP SC
9	1	33005534	TOOL TRAY, 1X5X12	38	2	SSFC90024	8-32 X 3/8 FL ALN CAP
10	1	33005605	PLATE,CLOTH,RH	39	14	SSHC01048	1/4-20 X 3/4 HEX CAP
11	4	33005623	STANDOFF	40	2	SSHC25064	3/8-16 X 1 HHCS
12	1	33005650A	BOTTOM PULLER ASSY	41	4	SSHC90032	#8-32 X 1/2 HEX CAP
13	1	33005656	SLEEVE,CLOTH GUARD	42	4	SSHC98024	10-32 X 3/8 HEX CAP
14	1	33005657A	ARM,EDGE GUIDE	43	4	SSHC98032	10-32X1/2 HEX HD
15	2	33005670	SPACER	44	4	SSHC98048	SCREW, HEX CAP #10-32X.75
16	2	33005673	GUARD BRKT	45	4	SSPS70048	4-40 X 3/4 PAN HD SLOTTED
17	1	33005679	BUSHING, EDGE GUIDE	46	4	SSSC98096S	10-32 X 1-1/2 SOC CAP,SS
18	2	33005688	BRKT, TRANSFER ROLLER	47	2	SSSS98016	SCREW,SKT SET,FLAT POINT
19	1	33005689	ROLLER,15.25L,2 OD,.75 ID	48	2	TTH32425	HANDLE,THRDED,5/16-18X3/4
20	1	33005689C	ROLLER,17.25L,2 OD,.75 ID	49	6	WWF10	WASHER, FLAT, #10, COM
21	1	33005690	ROD,STR,60C,1/2X17.5L	50	2	WWF8	WASHER, FLAT, #8
22	1	33005699	GUIDE,RH	51	14	WWFS1/4	WASHER,FLAT,SAE,1/4
23	1	33008201	ROD, ROLL, 16.8" L	52	8	WWFS10	WASHER, FLAT, #10, SAE
24	1	33008202	ROD,ROLL,SST,3/4X21 W/RAD	53	2	WWFS3/8	WASHER,FLAT,SAE,3/8
25	1	98202010	BRACKET, SENSOR	54	14	WWL1/4	WASHER,LOCK,1/4
26	1	CCCL12F	CLAMP COLLAR- 3/4	55	12	WWL10	WASHER,LOCK,#10
27	2	CCCL8F	CLAMP COLLAR- 1/2	56	2	WWL3/8	WASHER,LOCK, 3/8
28	1	EE49111AS	PUSH BUTTON SWITCH ASSY	57	4	WWL4	WASHER,LOCK,#4
29	2	FFSM312LVQ	EYE,ELECTRIC,10-30VDC	58	12	WWL8	WASHER,LOCK,#8

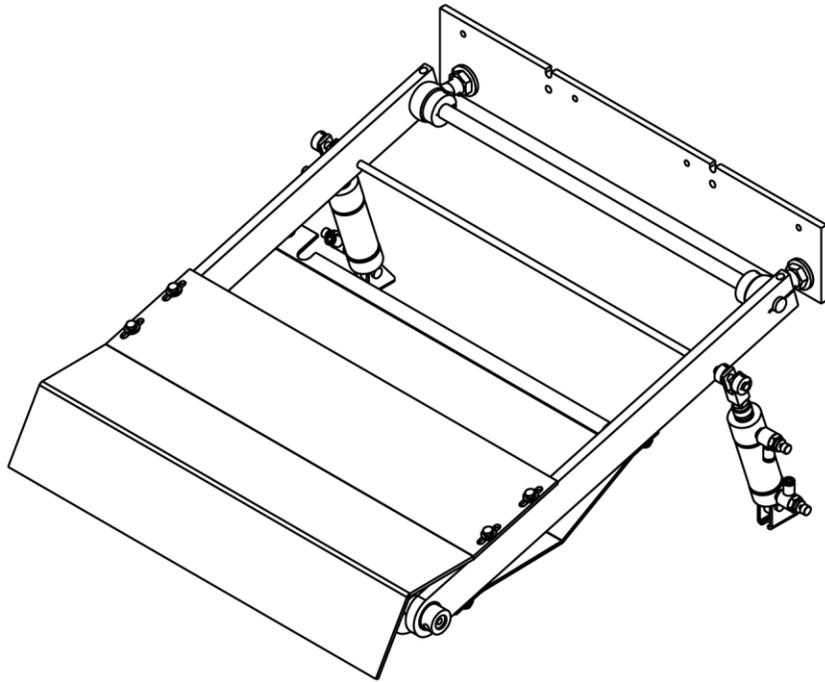

3200501 Prefeed Roller Assembly

AAC Drawing Number 3200501 Rev 0


NO.	QTY	PART #	DESCRIPTION
1	2	1325-11	ROD END,MALE, .5I.D.X.5-2
2	1	33005610	PULLER, LEFT ARM
3	1	33005611	ROD,STR,60C,1/2X17.0L
4	1	33005617	BAR, PIVOT MOUNTING
5	1	33005622	BRACE,PREFEED
6	1	33005628	PULLER, RIGHT ARM
7	1	33005633	COVER
8	1	33005652	PULLER,ROLLER
9	2	33005676	1/2 X 7/8 SET COLLAR
10	1	33005677	ROD,STR,60C,.25ODX19.75L
11	4	AA198RA508	FLOW CONTROL,5/32 X 1/8"
12	2	AAC6DP-1	CYLINDER,AIR,DA
13	2	AAFBP-11C	BRKT,PIVOT,1/4 BORE
14	2	AAFCT-11	CLEVIS, CYL, 5/16-24 ,1/4
15	4	CCCL4F	COLLAR,1/4,CLAMP
16	2	CCCL8F	CLAMP COLLAR- 1/2
17	4	NNJ1/2-20	1/2-20 JAM NUT
18	2	NNJ5/16-24	NUT,JAM,5/16-24
19	8	SSH95032	SCREW, HEX CAP
20	4	WWFS1/2	WASHER,FLAT,SAE,1/2
21	8	WWFS10	WASHER, FLAT, #10, SAE
22	8	WWL10	WASHER,LOCK,#10

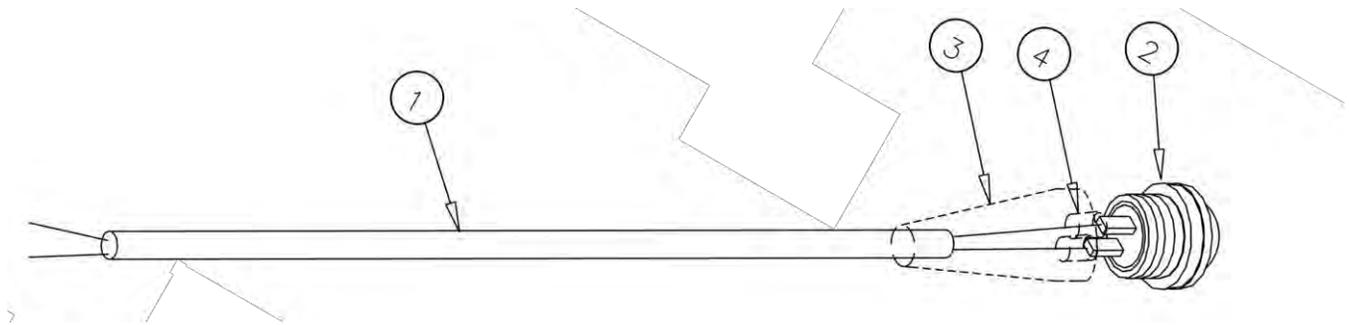

EE4911AS Push Button Switch Assembly

AAC Drawing Number 9001185 Rev 3

NO.	QTY	PART #	DESCRIPTION
1	8'	EE8442	CABLE, 22 GA
2	1	EE49111	SWITCH
3	.2'	ZTH1/4	HEAT SHRINK
4	5"	ZTH3/16	HEAT SHRINK

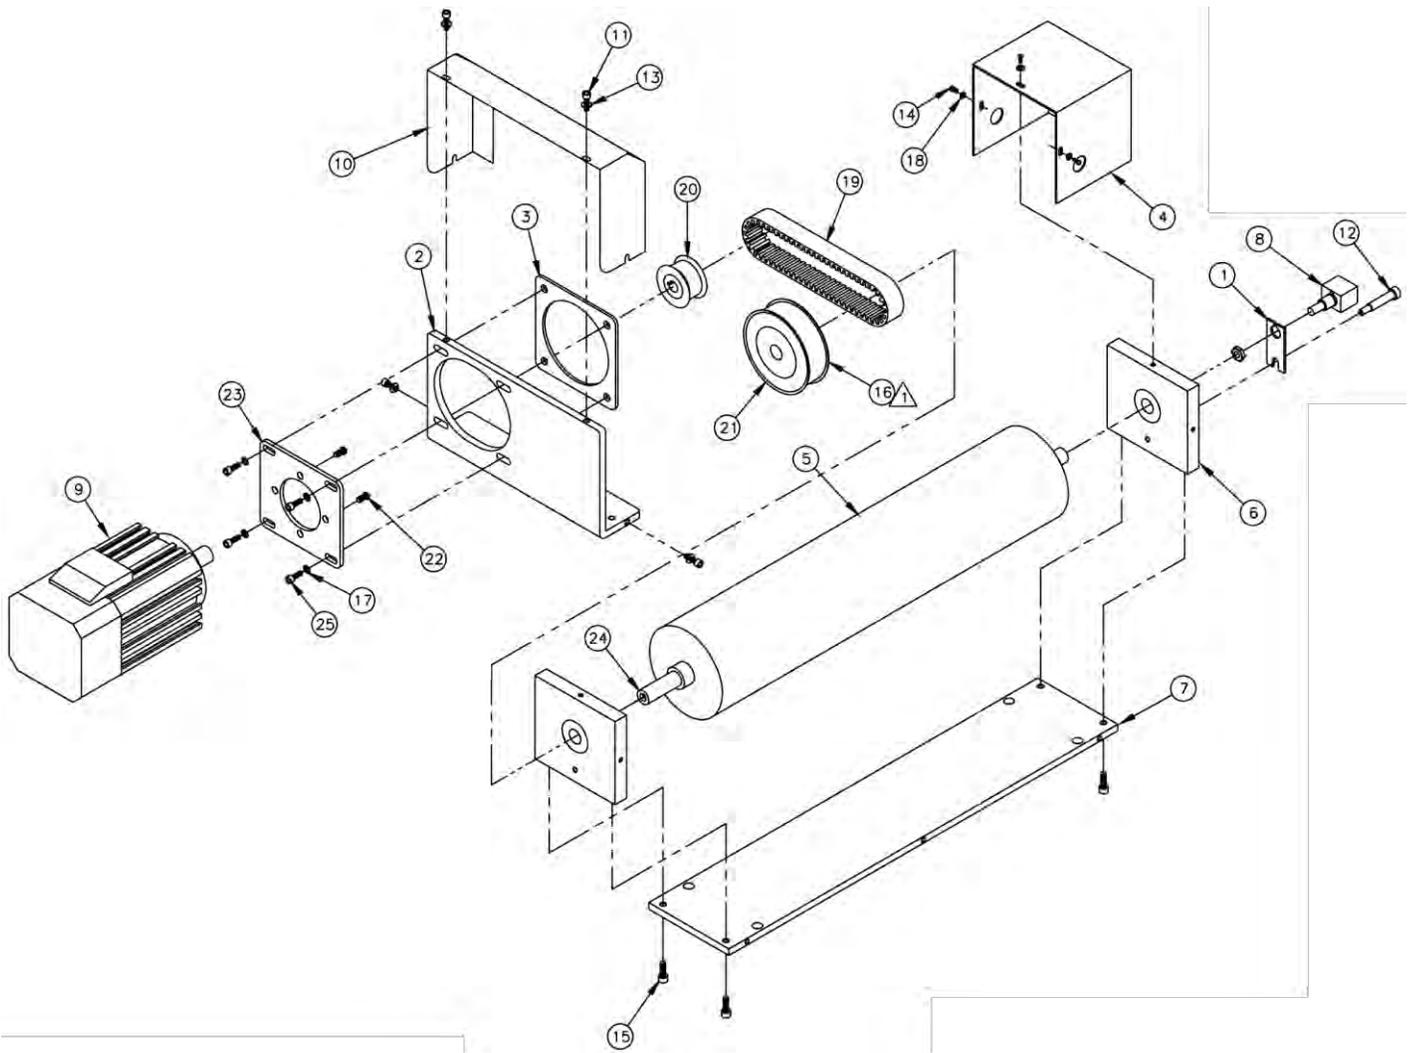

33005650A Bottom Puller Roller Assembly

AAC Drawing Number 192913B Rev3


NO	QTY	PART#	DESCRIPTION
1	1	33004080	BRKT, ENCODER SUPPORT
2	1	33005674	BRKT, MOTOR MOUNTING
3	1	0411-016	NUT PLATE
4	1	33005681	GUARD, ENCODER
5	1	33005603C	PULLER ROLLER
6	2	33005608	BLOCK BEARING
7	1	33005609	PATE, BEARING MTG
8	1	EENC256	ENCODER
9	1	4059-DC1500A	STEPPER MOTOR
10	1	33005692	BELT GUARD
11	4	SSSC70024	SCREW, SOCKET CAP 4-40 X 3/8
12	1	SSASO16064	SCREW, ALLEN SHOULDER 1/4 X 1, 10-24
13	4	WWF4	WASHER, FLAT
14	3	SSBC80024	SCREW BUTTON CAP 6-32 X 3/8
15	4	SSSC98032	SCREW, SOCKET CAP 10-32 X 1/2
16	2	SSSC01064	SCREW, SOCKET CAP 1/4-20 X 1
17	4	WWFS10	WASHER FLAT
18	3	WWFS6	SAE FLAT WASHER
19	1	GG142L050	BELT
20	1	PP10LF050M3	PULLEY, 10T
21	1	PP24LB050M1	PULLEY, 24T
22	4	SSSCM5X14	SCREW, SOCKET CAP M5-08 X 14
23	1	4059-3200	PLATE, CONVERSION
24	1	330056003C2	SHAFT, ROLLER
25	4	SSSC98040	SCREW, SOCKET CAP 10-32 X 5/8

32007700P Roll Holder Assembly

AAC Drawing Number 192088A Rev1

NO.	QTY	PART #	DESCRIPTION
1	1	1961-253A	Unwind Hub
2	1	784B-2436	Alu Plate
3	1	WWL 3/8	Lock Washer
4	1	32007704	Roll Hold Frame
5	1	33008202	Rod, 3/4x21
6	2	WWSQ080B	Washer SQ. Struct
7	1	MM132-1496	End Cap
8	1	SSHC25160	Hex Cap Screw 3/8-16 x 2-1/2
9	4	SSFC80032	Allen Cap Screw Flat 6-32 x 1/2

ADD VALVE FROM
MARKER KIT HERE
IF NECESSARY

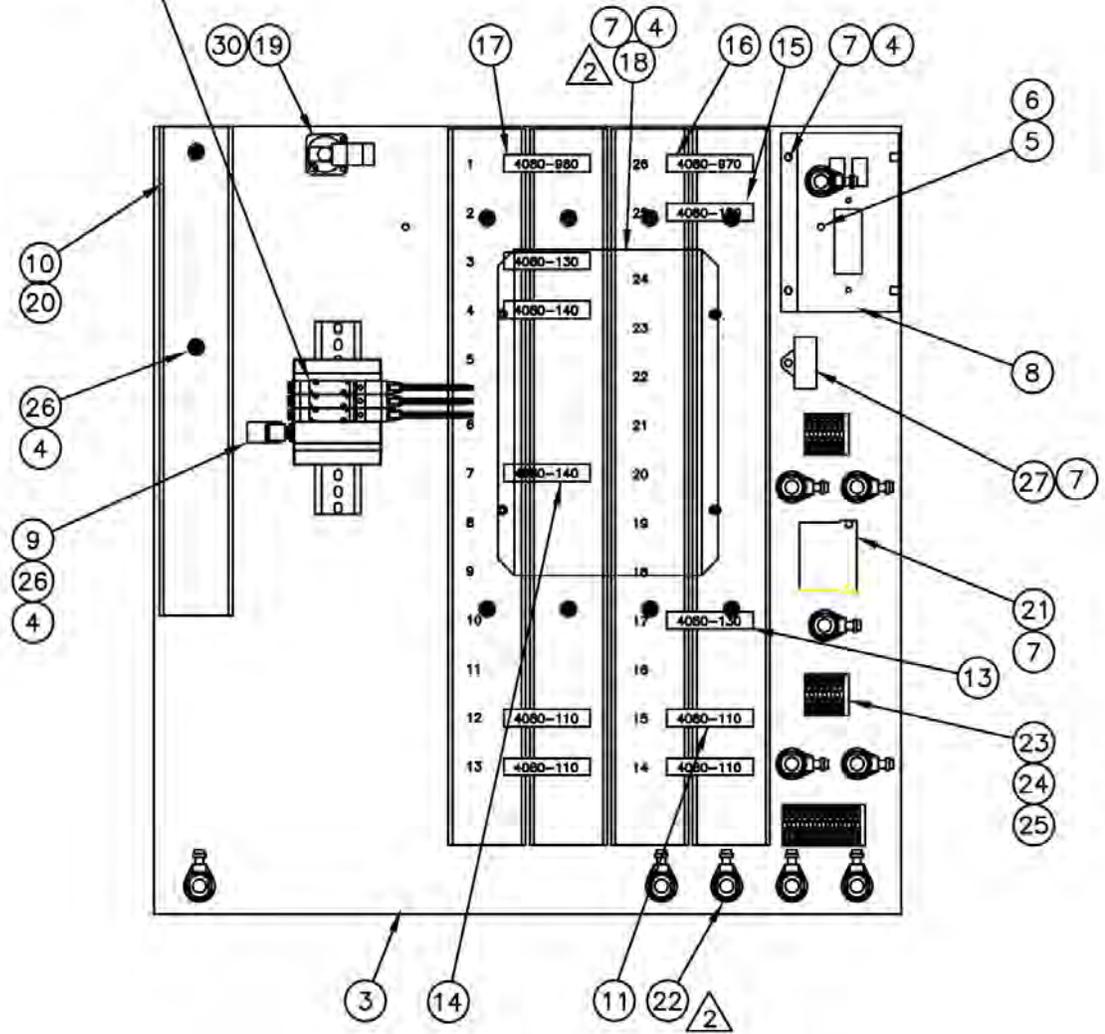


32009000PB1 Control System

AAC Drawing Number 192132A Rev5

NO	QTY	PART #	DESCRIPTION
1	1	32009100PB1	CABLE PACKAGE
2	2	TTAA5267	TERMINAL
3	1	32009001A	PANEL, CONTROL
4	20	WWF8	FLAT WASHER, #8
5	1	NNK8-32	KEP NUT
6	1	TT5811	TERMINAL RING
7	11	SSSC90024	SCREW, SOCKET CAP 8-32 X3/8
8	1	40-320	AC POWER DISCONN. ASSY.
9	1	AAE3200-3	SOLENOID VALVE ASSY.
10	10'	EEDF2X2	DUCT, WIRE
11	4	4080-110	MODULE, QUAD INPUT
12	AR	SEE NOTE 3	WIRING DIAGRAM
13	2	4080-130	MODULO, DUAL OPTO-ISO
14	2	4080-140	MODULE, QUAD OUTPUT
15	1	4080-150	MODULE, PROGRAM
16	1	4080-970	MODULE, MEMORY
17	1	4080-980	MODULE, SBUS-CONT
18	1	4080-990R	BOX, POWER SUPPLY
19	1	AAVF51M1B	AIR/ELEC SWITCH
20	10'	EEDC2X2	DUCT, WIRING COVER
21	1	EECA491024	CONTACTOR, MINI
22	11	FF1724	STRAIN RELIEF
23	8	FF264-341	TERMBLK, WAGO, GRAY
24	4	FF264-347	TERMBLK, WAGO, GRN
25	32	FF2264-371	TERMBLK, WAGO, END
26	12	SSPS90024	SCREW, PAN HD SLOTTED 8-32 X 3/8
27	1	FFRAV781BW	MODULE, TVS
28	AR	12788-509A	JUMPER, RESISTOR
29	AR	3200PB1-PD	PNEUMATIC DIAGRAM
30	2	SSSC70024	SCREW, SOCKET CAP 4-40 X 3/8
31	AR	3200PLAB	LABEL

33001130 Light Assembly

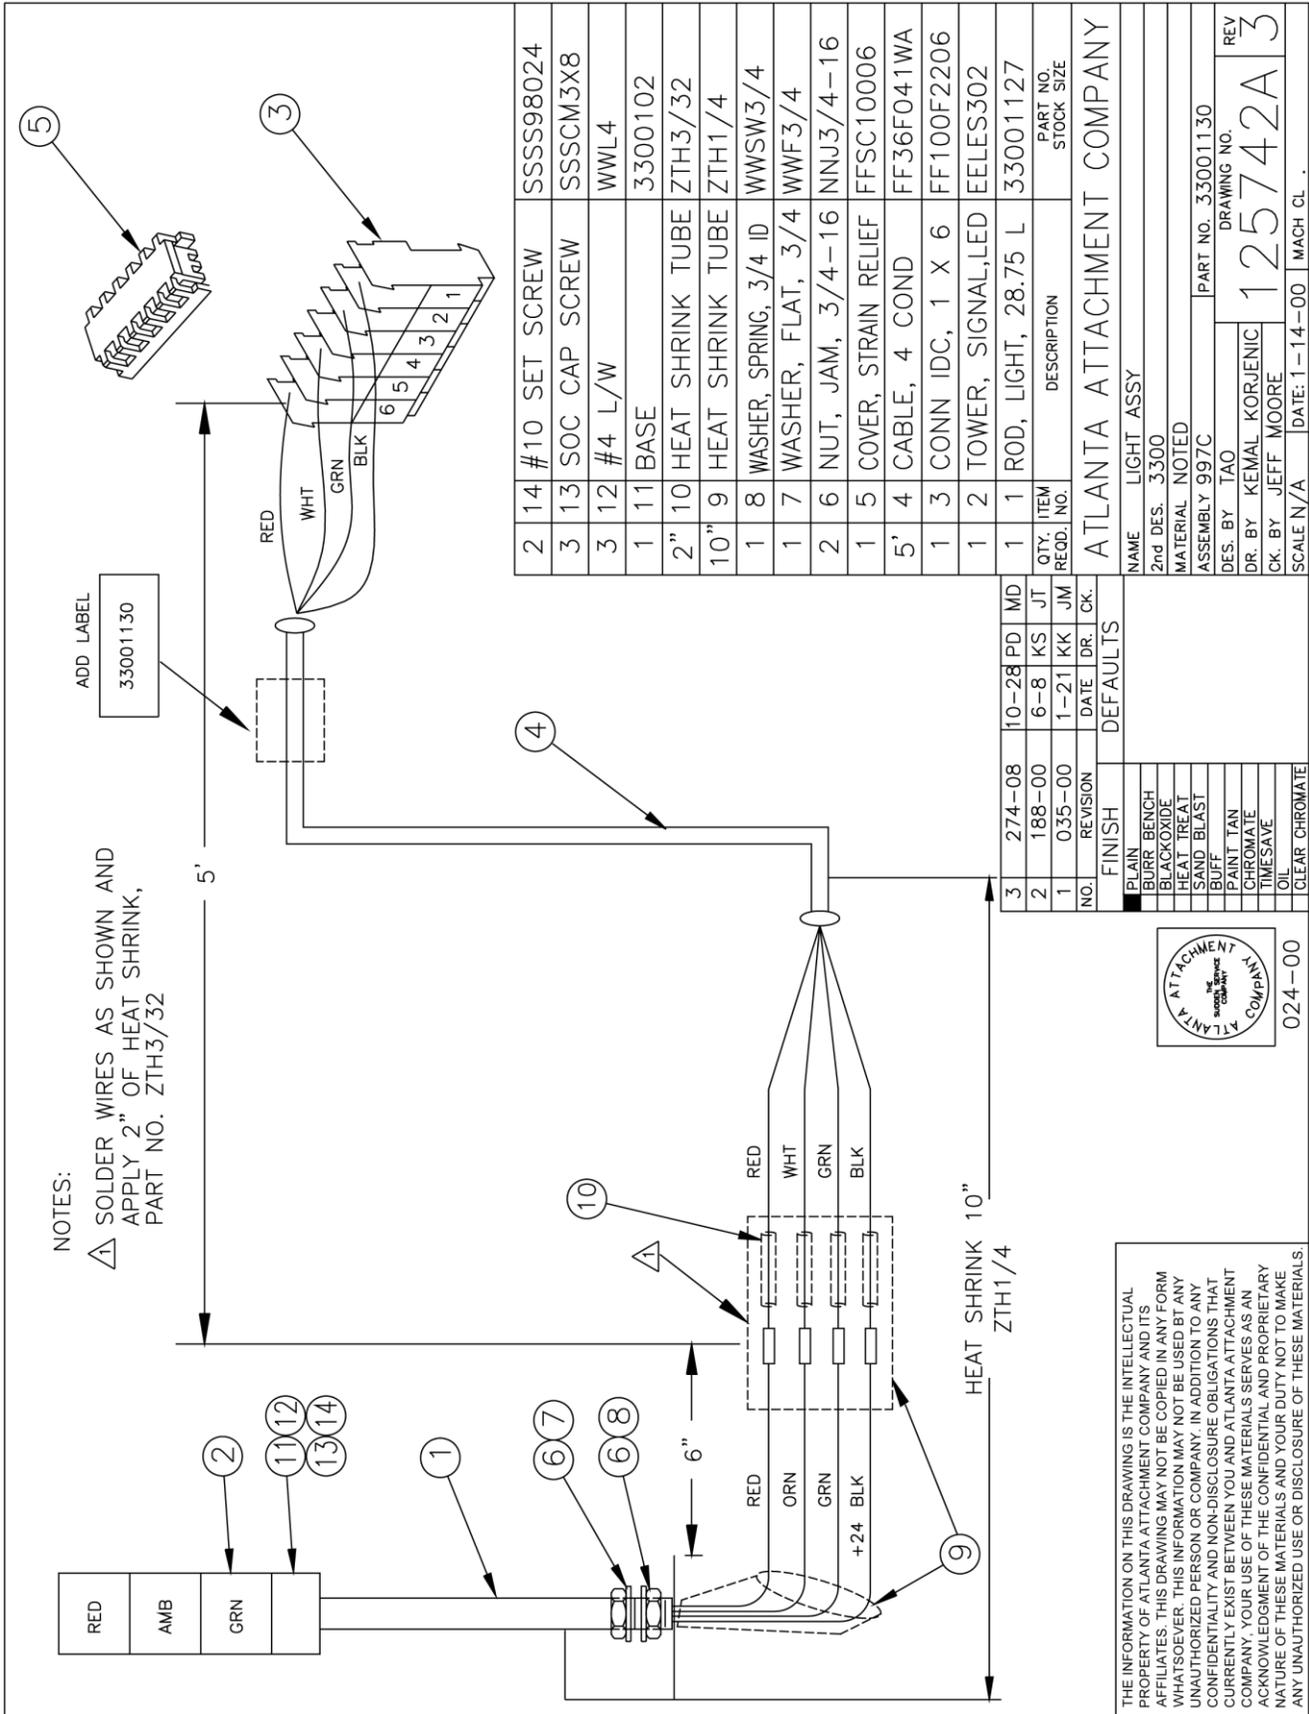

2	14	#10 SET SCREW	SSSS98024
3	13	SOC CAP SCREW	SSSCM3X8
3	12	#4 L/W	WWL4
1	11	BASE	3300102
2	10	HEAT SHRINK TUBE	ZTH3/32
10	9	HEAT SHRINK TUBE	ZTH1/4
1	8	WASHER, SPRING, 3/4 ID	WWSW3/4
1	7	WASHER, FLAT, 3/4	WWF3/4
2	6	NUT, JAM, 3/4-16	NNJ3/4-16
1	5	COVER, STRAIN RELIEF	FFSC10006
5	4	CABLE, 4 COND	FF36F041WA
1	3	CONN IDC, 1 X 6	FF100F2206
1	2	TOWER, SIGNAL,LED	EELES302
1	1	ROD, LIGHT, 28.75 L	33001127


QTY.	ITEM	DESCRIPTION	PART NO.
RECD.	NO.		STOCK SIZE
ATLANTA ATTACHMENT COMPANY			
NAME LIGHT ASSY			
2nd DES. 3300			
MATERIAL NOTED			
ASSEMBLY 997C			
PART NO. 33001130			
DES. BY TAO			
DRAWING NO.			
DR. BY KEMAL KORJENIC			
REV			
CK. BY JEFF MOORE			
125742A			
3			
SCALE N/A			
DATE: 1-14-00			
MACH CL.			

NO.	REVISION	DATE	DR.	CHK.
3	274-08	10-28	PD	MD
2	188-00	6-8	KS	JT
1	035-00	1-21	KK	JM
FINISH				
PLAIN				
BURR BENCH				
BLACKOXIDE				
HEAT TREAT				
SAND BLAST				
BUFF				
PAINT TAN				
CHROMATE				
TIMESAVE				
OIL				
CLEAR CHROMATE				

ATLANTA ATTACHMENT COMPANY	
024-00	

THE INFORMATION ON THIS DRAWING IS THE INTELLECTUAL PROPERTY OF ATLANTA ATTACHMENT COMPANY AND ITS AFFILIATES. THIS DRAWING MAY NOT BE COPIED IN ANY FORM WHATSOEVER. THIS INFORMATION MAY NOT BE USED BY ANY UNAUTHORIZED PERSON OR COMPANY. IN ADDITION TO ANY CONFIDENTIALITY AND NON-DISCLOSURE OBLIGATIONS THAT CURRENTLY EXIST BETWEEN YOU AND ATLANTA ATTACHMENT COMPANY, YOUR USE OF THESE MATERIALS SERVES AS AN ACKNOWLEDGMENT OF THE CONFIDENTIAL AND PROPRIETARY NATURE OF THESE MATERIALS AND YOUR DUTY NOT TO MAKE ANY UNAUTHORIZED USE OR DISCLOSURE OF THESE MATERIALS.

4060-0652 P C Board

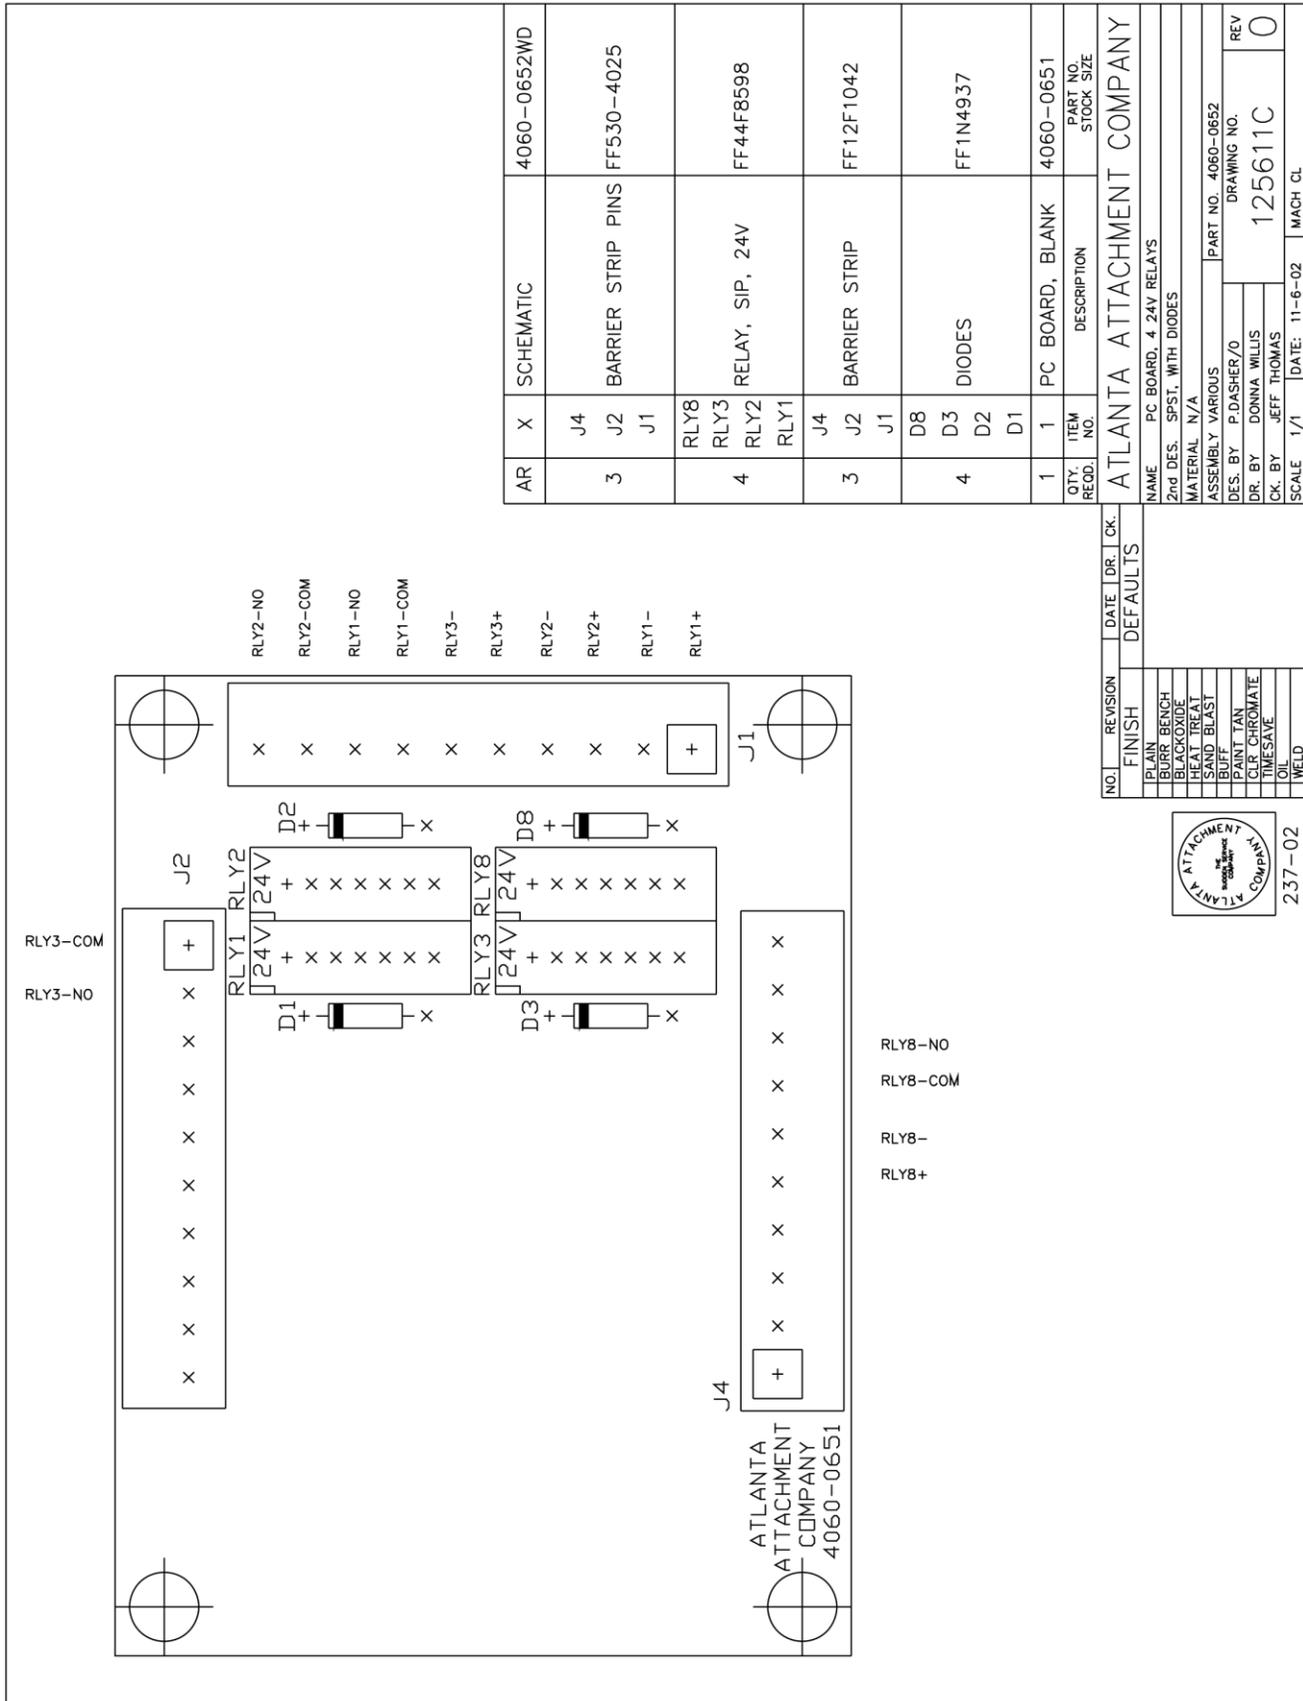

AR	X	SCHEMATIC	4060-0652WD
3	J4	BARRIER STRIP PINS	FF530-4025
4	J2	BARRIER STRIP	FF12F1042
4	J1	BARRIER STRIP	FF12F1042
4	RLY8	RELAY, SIP, 24V	FF44F8598
3	RLY3	RELAY, SIP, 24V	FF44F8598
3	RLY2	RELAY, SIP, 24V	FF44F8598
3	RLY1	RELAY, SIP, 24V	FF44F8598
4	J4	BARRIER STRIP	FF12F1042
4	J2	BARRIER STRIP	FF12F1042
4	J1	BARRIER STRIP	FF12F1042
4	D8	DIODES	FF1N4937
4	D3	DIODES	FF1N4937
4	D2	DIODES	FF1N4937
4	D1	DIODES	FF1N4937
1	1	PC BOARD, BLANK	4060-0651

QTY.	ITEM	DESCRIPTION	PART NO.	STOCK SIZE
1	1	PC BOARD, BLANK	4060-0651	

ATLANTA ATTACHMENT COMPANY

NAME	PC BOARD, 4 24V RELAYS
2nd DES.	SPST, WITH DIODES
MATERIAL	N/A
ASSEMBLY VARIOUS	PART NO. 4060-0652
DES. BY	P.DASHER/O
DR. BY	DONNA WILLIS
CK. BY	JEFF THOMAS
SCALE	1/1
DATE	11-6-02
MACH	CL

NO.	REVISION	DATE	DR.	CK.


DEFAULTS

FINISH	
PLAIN	
BURR BENCH	
FLAME BRUIE	
HEAT TREAT	
SAND BLAST	
BUFF	
PAINT TAN	
CLR CHROMATE	
TIMESAVE	
OIL	
WELD	



ATLANTA
ATTACHMENT
COMPANY
4060-0651

3200PB1Z-WD Wiring Diagram, Control Panel

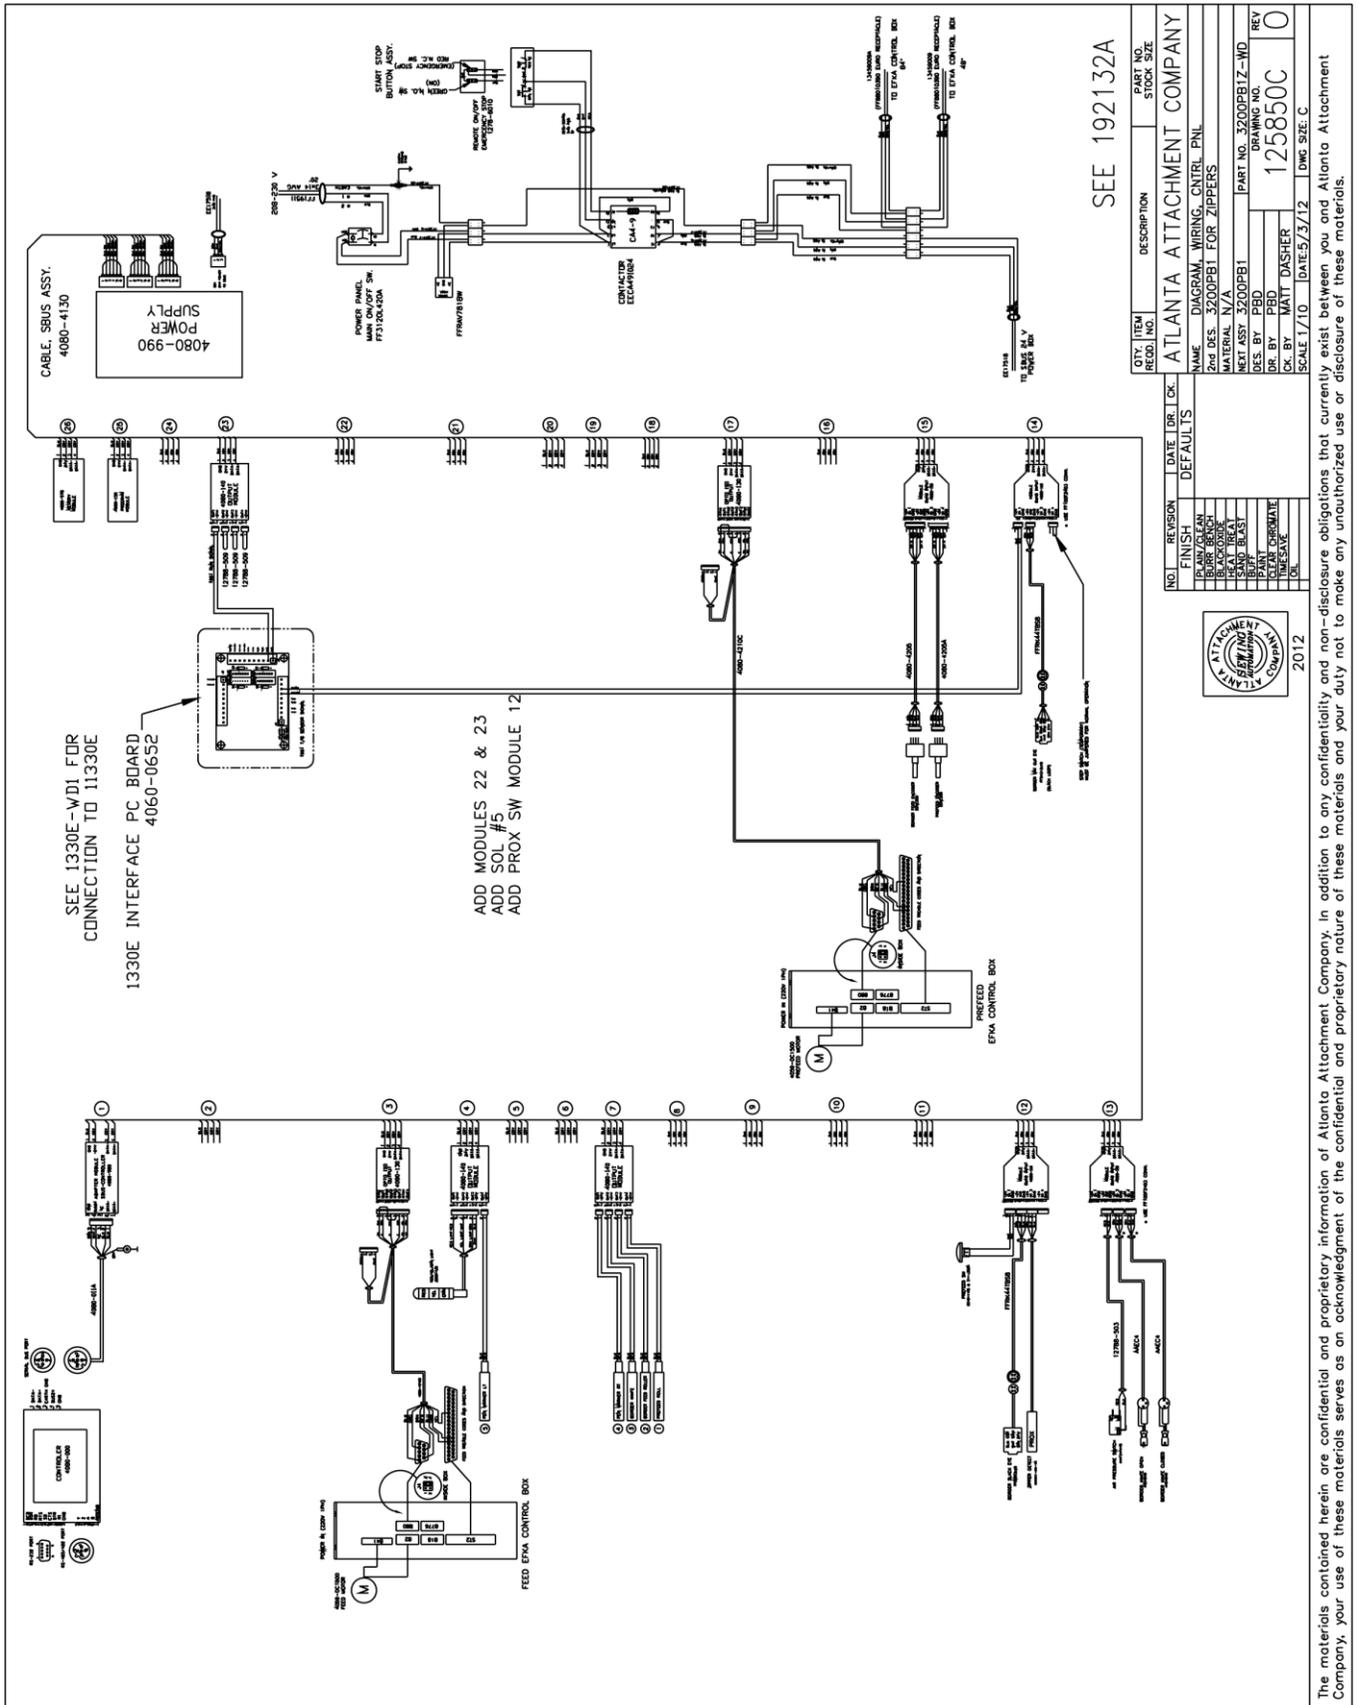


SEE 192132A

QTY.	ITEM	DESCRIPTION	PART NO.	STOCK SIZE
		ATLANTA ATTACHMENT COMPANY		
		NAME	DIAGRAM WIRING CTRL PNL	
		DWG NO.	3200PB1Z FOR ZIPPERS	
		MATERIAL	N/A	
		NET ASSY	3200PB1	
		DES. BY	PRD	
		CHK. BY	MATT DASHNER	
		SCALE	1/10	
		DRAWING NO.	125850C	
		REV	0	
		DATE	5/3/12	
		DWG SIZE	C	

NO.	REVISION	DATE	DR.	CK.	DEFAULTS
1	INITIAL				
2	REWORK				
3	REWORK				
4	REWORK				
5	REWORK				
6	REWORK				
7	REWORK				
8	REWORK				
9	REWORK				
10	REWORK				
11	REWORK				
12	REWORK				
13	REWORK				
14	REWORK				
15	REWORK				
16	REWORK				
17	REWORK				
18	REWORK				
19	REWORK				
20	REWORK				
21	REWORK				
22	REWORK				
23	REWORK				
24	REWORK				
25	REWORK				
26	REWORK				
27	REWORK				
28	REWORK				
29	REWORK				
30	REWORK				
31	REWORK				
32	REWORK				
33	REWORK				
34	REWORK				
35	REWORK				
36	REWORK				
37	REWORK				
38	REWORK				
39	REWORK				
40	REWORK				
41	REWORK				
42	REWORK				
43	REWORK				
44	REWORK				
45	REWORK				
46	REWORK				
47	REWORK				
48	REWORK				
49	REWORK				
50	REWORK				
51	REWORK				
52	REWORK				
53	REWORK				
54	REWORK				
55	REWORK				
56	REWORK				
57	REWORK				
58	REWORK				
59	REWORK				
60	REWORK				
61	REWORK				
62	REWORK				
63	REWORK				
64	REWORK				
65	REWORK				
66	REWORK				
67	REWORK				
68	REWORK				
69	REWORK				
70	REWORK				
71	REWORK				
72	REWORK				
73	REWORK				
74	REWORK				
75	REWORK				
76	REWORK				
77	REWORK				
78	REWORK				
79	REWORK				
80	REWORK				
81	REWORK				
82	REWORK				
83	REWORK				
84	REWORK				
85	REWORK				
86	REWORK				
87	REWORK				
88	REWORK				
89	REWORK				
90	REWORK				
91	REWORK				
92	REWORK				
93	REWORK				
94	REWORK				
95	REWORK				
96	REWORK				
97	REWORK				
98	REWORK				
99	REWORK				
100	REWORK				

The materials contained herein are confidential and proprietary information of Atlanta Attachment Company. In addition to any confidentiality and non-disclosure obligations that currently exist between you and Atlanta Attachment Company, your use of these materials serves as an acknowledgment of the confidential and proprietary nature of these materials and your duty not to make any unauthorized use or disclosure of these materials.

3200PB1Z-PD Pneumatic Diagram

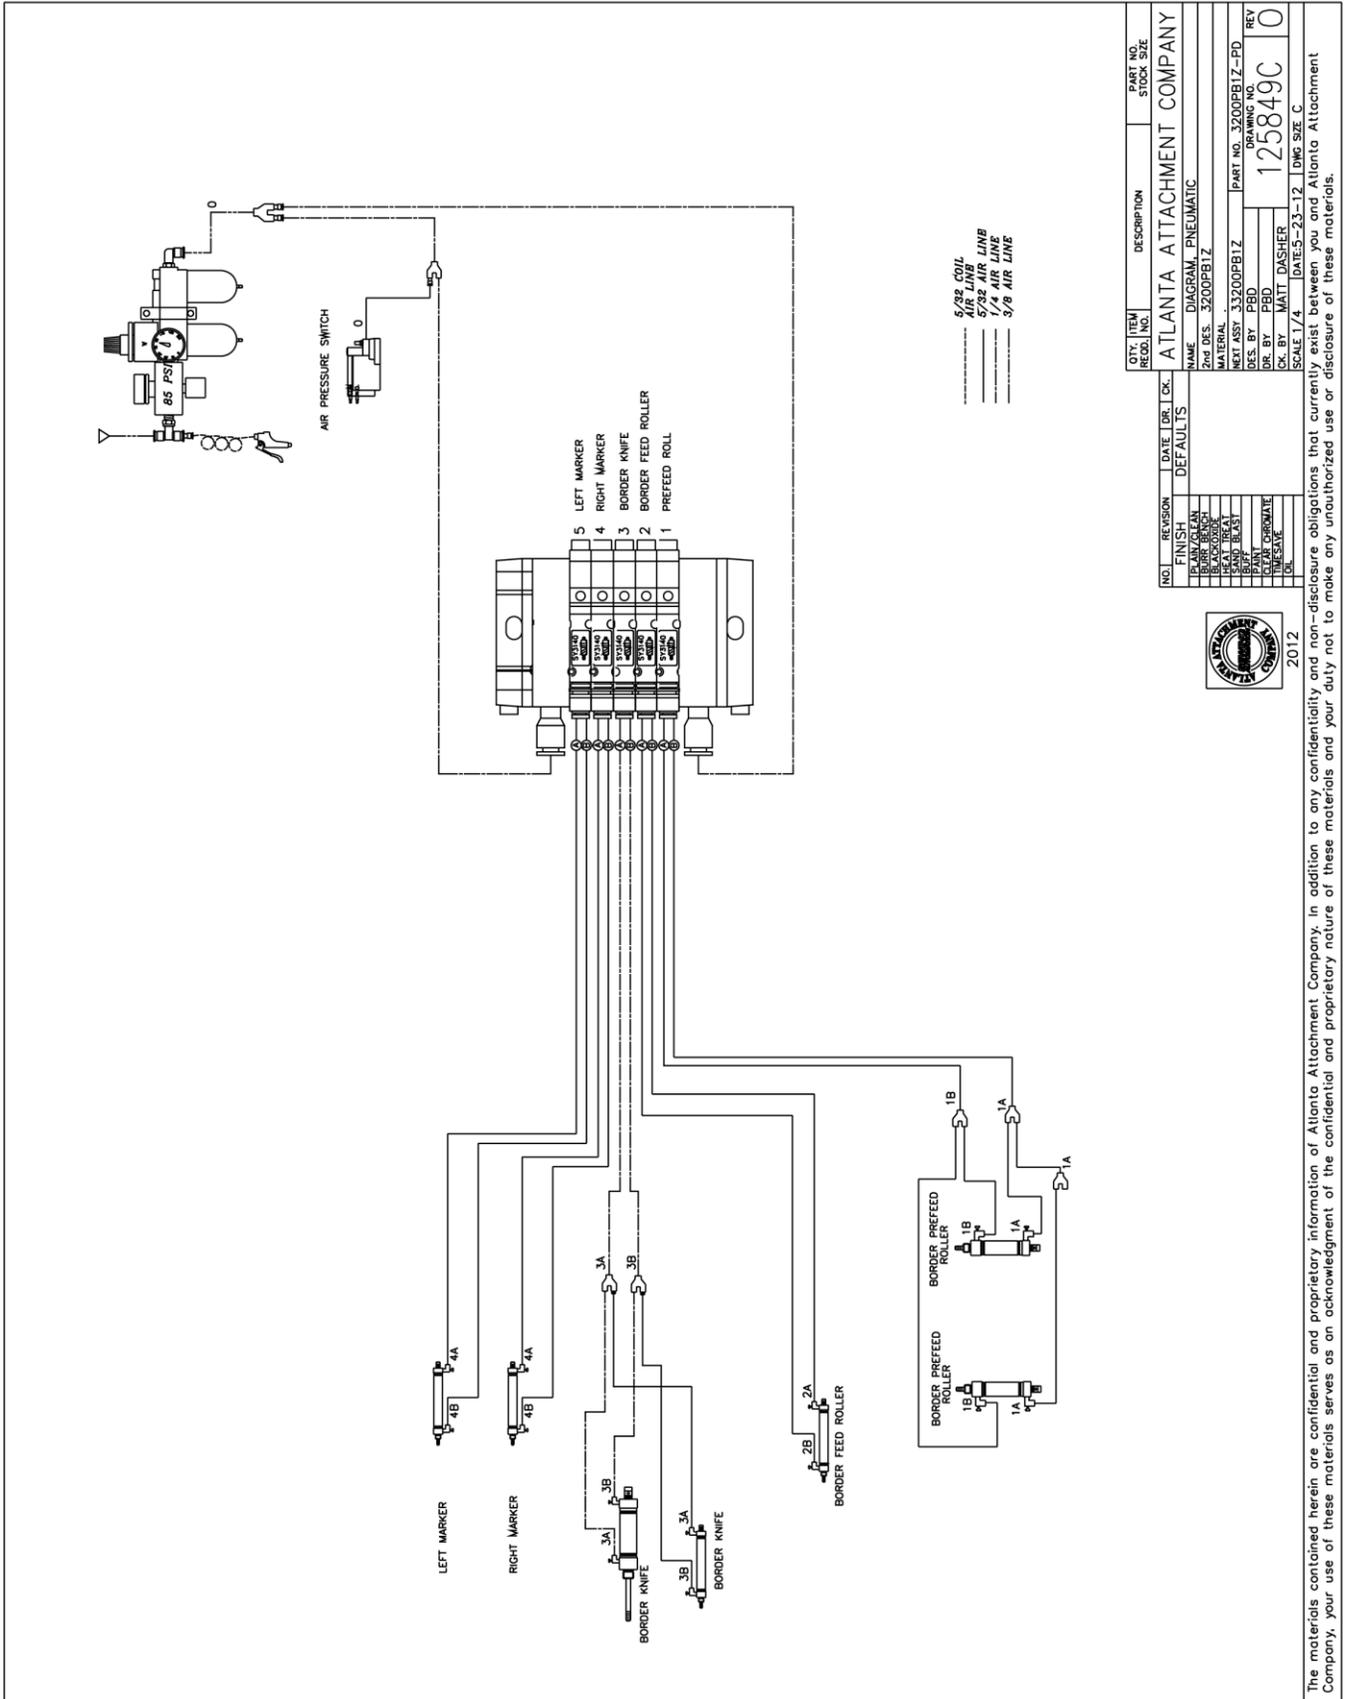

Atlanta Attachment Company (AAC) Statement of Warranty

Manufactured Products

Atlanta Attachment Company warrants manufactured products to be free from defects in material and workmanship for a period of eight hundred (800) hours of operation or one hundred (100) days whichever comes first. Atlanta Attachment Company warrants all electrical components of the Serial Bus System to be free from defects in material or workmanship for a period of thirty six (36) months.

Terms and Conditions:

- AAC Limited Warranty becomes effective on the date of shipment.
- AAC Warranty claims may be made by telephone, letter, fax or e-mail. All verbal claims must be confirmed in writing.
- AAC reserves the right to require the return of all claimed defective parts with a completed warranty claim form.
- AAC will, at its option, repair or replace the defective machine and parts upon return to AAC.
- AAC reserves the right to make the final decision on all warranty coverage questions.
- AAC warranty periods as stated are for eight hundred (800) hours or one hundred (100) days whichever comes first.
- AAC guarantees satisfactory operation of the machines on the basis of generally accepted industry standards, contingent upon proper application, installation and maintenance.
- AAC Limited Warranty may not be changed or modified and is not subject to any other warranty expressed or implied by any other agent, dealer, or distributor unless approved in writing by AAC in advance of any claim being filed.

What Is Covered

- Electrical components that are not included within the Serial Bus System that fail due to defects in material or workmanship, which are manufactured by AAC are covered for a period of eight hundred (800) hours.
- Mechanical parts or components that fail due to defects in material or workmanship, which are manufactured by AAC.
- Purchased items (sewing heads, motors, etc.) will be covered by the manufacturers (OEM) warranty.
- AAC will assist in the procurement and handling of the manufacturers (OEM) claim.

What Is Not Covered

- Parts that fail due to improper usage, lack of proper maintenance, lubrication and/or modification.
- Damages caused by; improper freight handling, accidents, fire and issues resulting from unauthorized service and/or personnel, improper electrical, plumbing connections.
- Normal wear of machine and parts such as Conveyor belts, "O" rings, gauge parts, cutters, needles, etc.
- Machine adjustments related to sewing applications and/or general machine operation.
- Charges for field service.
- Loss of time, potential revenue, and/or profits.
- Personal injury and/or property damage resulting from the operation of this equipment.

Declaración de Garantía

Productos Manufacturados

Atlanta Attachment Company garantiza que los productos de fabricación son libres de defectos de material y de mano de obra durante un periodo de ochocientos (800) horas de operación o cien (100) días cual llegue primero. Atlanta Attachment Company garantiza que todos los componentes del Serial bus son libres de defectos de material y de mano de obra durante un periodo de treinta y seis (36) meses.

Términos y Condiciones:

- La Garantía Limitada de AAC entra en efecto el día de transporte.
- Reclamos de la Garantía de AAC pueden ser realizados por teléfono, carta, fax o correo electrónico. Todo reclamo verbal tiene que ser confirmado vía escrito.
- AAC reserva el derecho para exigir el retorno de cada pieza defectuosa con un formulario de reclamo de garantía.
- AAC va, según su criterio, reparar o reemplazar las máquinas o piezas defectuosas devueltas para AAC.
- AAC reserva el derecho para tomar la decisión final sobre toda cuestión de garantía.
- Las garantías de AAC tiene una validez de ochocientos (800) horas o cien (100) días cual llega primero.
- AAC garantiza la operación satisfactoria de sus máquinas en base de las normas aceptadas de la industria siempre y cuando se instale use y mantenga de forma apropiada.
- La garantía de AAC no puede ser cambiado o modificado y no está sujeto a cualquier otra garantía implicado por otro agente o distribuidor menos al menos que sea autorizado por AAC antes de cualquier reclamo.

Lo Que Está Garantizado

- Componentes eléctricos que no están incluidos dentro del sistema Serial Bus que fallen por defectos de materiales o de fabricación que han sido manufacturados por AAC son garantizados por un periodo de ochocientos (800) horas.
- Componentes mecánicos que fallen por defectos de materiales o de fabricación que han sido manufacturados por AAC son garantizados por un periodo de ochocientos (800) horas.
- Componentes comprados (Motores, Cabezales,) son protegidos debajo de la garantía del fabricante.
- AAC asistirá con el manejo de todo reclamo de garantía bajo la garantía del fabricante.

Lo Que No Está Garantizado

- Falla de repuestos al raíz de uso incorrecto, falta de mantenimiento, lubricación o modificación.
- Daños ocurridos a raíz de mal transporte, accidentes, incendios o cualquier daño como resultado de servicio por personas no autorizados o instalaciones incorrectas de conexiones eléctricas o neumáticas.
- Desgaste normal de piezas como correas, anillos de goma, cuchillas, agujas, etc.
- Ajustes de la máquina en relación a las aplicaciones de costura y/o la operación en general de la máquina.
- Gastos de Reparaciones fuera de las instalaciones de AAC
- Pérdida de tiempo, ingresos potenciales, y/o ganancias.
- Daños personales y/o daños a la propiedad como resultado de la operación de este equipo.



Atlanta Attachment Company
362 Industrial Park Drive
Lawrenceville, GA 30046
770-963-7369
www.atlatt.com

Printed in the USA